Caution

Use the safety belt to avoid any injury.

Do not leave unattended infant on the stroller

Do not allow the infant to stand on the stroller.

Prevent the infant from climbing the stroller.

The infant should be assisted by an adult while getting in and out of the stroller.

Brakes must be used while putting the infant in or taking the infant out of the stroller.

Keep away from fire.

Do not use the stroller on steep slopes, stairs, rough roads or any other dangerous sites.

Do not carry more than one child in a stroller.

Do not use any spare parts or accessories which are not supplied by the manufacturer.

Always apply brakes to rear wheels when the stroller is not in motion.

The stroller can carry a child weighing up to 30 kg (0-3 years).

Don't put plastic bags near the child to avoid asphyxia.

Always make sure the brake is locked before use.

Don't place any extra object which may cause danger.

Preventive measures

- Always check for loose screws, ageing accessories and tattering materials.
- Keep the stroller away from sharp objects.
- Any sort of impact or external force should be avoided as the child may be effected.
- Fabrics to be washed using neutral detergents in lukewarm water to avoid fabric damage.
- The rotation gears should be lubricated to maintain flexibility in rotation.

For product enquiry in India please contact:

Universal Corporation Ltd. | 4/1, Middleton Street, Kolkata 700071 | Ph: 033 3090 4238


Email: info@uclindia.com







Kindly read the instructions given in the manual carefully and retain it for future reference. If the instructions given in the manual are ignored, it may cause threat to the baby's safety.

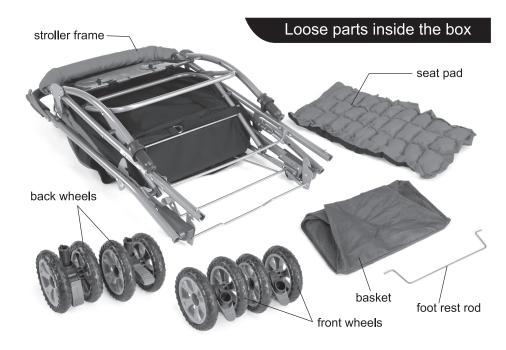

Note: If any part is missing, please inform your distributor/retailer.

Installation Guidelines



1 Loosen the red hook. Open the stroller frame by grasping the backrest and the handrail of the stroller. Then apply force on the back so that the hook reaches the bolt and the double lock.



2 Attach the seat pad with the help of the belt at the backseat. Pull the harness provided in front of the seat through the seat pad and secure it with the front rod with the buttons provided.



3 To attach the front wheel, pull the red lever up and insert the wheel into the provided sockets. Keep the red locks towards the front of the stroller. Push down the lock to prevent the front wheels from rotating.



4 Push the back wheels up into the sockets provided and align the wheel with the lock provided in the socket. A click will be heard ensuring the locks of the wheel.



5 Attach the foot rest rod to the sockets provided at the bottom of the foot rest board. Attach the foot rest board to the wire in order to adjust the height.



6 Attach the basket with the rods provided below the seat near the front and rear wheels. Secure it with the buttons provided in the basket.

Functional Guidelines



To stop the stroller, step down on the brake at the back wheels.



2 The handle bar is reversible. To change handlebar position, pull the control Wire beneath the handlebar and adjust it as required. Spread the canopy to move the handlebar.



3 The backrest can be adjusted in 3 positions with the help of the backrest control wire,



4 The footrest is to be kept flat with the help of the footrest support rod.

Folding Guidelines



1 Remove the basket and the foot rest rod.



2 Unfold the canopy.



3 Step the stick down to unlock.



4 Push down the localizer to fold the body.



5 Fasten the red hook of the stroller's handlebar to the front handle and secure it in a folded position.

Usage of Belt: The belt tightness can be adjusted as required.

Warning: The belt must be fastened when in use.