


User's Guide

Product Instruction

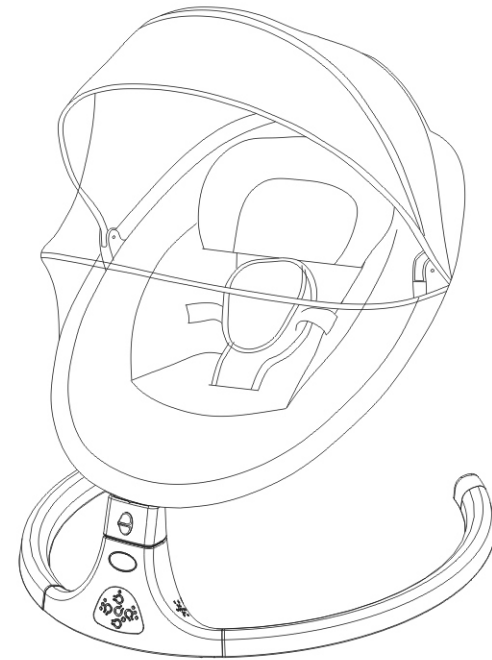

Before installing and using, please follow the instruction carefully,
otherwise it may effect the child's safe.

PRODUCT CATALOG

1.Catalog	1
2.Knowing Product	2
Product Specification	2
Product Detail	3
Assembling Detail	4
Safety Instructions	5
3.Using Product	6
Control Function	7
Panel Function	7
4.Matters Need Attention	8

Product Feature

This product has been certificated by ASTM/CPSIA

Product Specification

Product Name	Baby swing chair
Model Number	RYT0263/64/65
Input Voltage	100-240V/50/60HZ 0.3A
Output Voltage	5-6V \leq 1000 mA
Applicable age	0-12 months
Standard	ASTM/CPSIA
Warning	Do not use the non-matching adaptor



Caution

- 1) Practical in adult supervision.
- 2) No short circuit of power terminals.
- 3) Forbid to use the non-matching adaptor ,the input voltage of
- 4) adaptor is 100-240V/50/60HZ 0.3A
- 5) Keep the adaptor away from child while using.
- 6) Check the adaptor, accessory at regular preriod. If you find any damages of parts please stop using.

Knowing Product


Parts Instruction

Please check the quantity of items;
please contact the shop if there are any missing parts.

No.	Item	Quantity	No.	Item	Quantity
A	Base frame	1	B	Seat frame	1
C	Awning	1	D	Toy bar	optional
Accessory optional					

Product Detail

 Refer to the actual product.

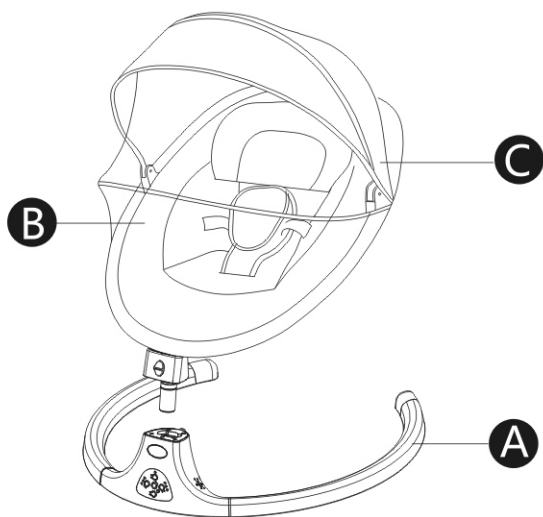


Matters Need Attention


1. Keep the seatbelt on while using.
2. Do not leave the child unattended.
3. Applicable age: 0-12 months old.
4. The maximum weight for this product is 15 KG.
5. DO NOT move or lift the product by handling the toy stick.
6. DO NOT move or lift the product when the child sitting on it.
7. DO NOT hang other items from the toy stick except the matched toys.
8. DO NOT place the product at a high position (table top, stairs or other high position from the ground)in case of fall risk.
9. It' s dangerous to use this product on an elevated surface.
10. DO NOT use the product on a soft matter (sofa, bed) to avoid falling and cause asphyxiating.
11. Not recommended for children who sit up by themselves s (8 months appromately, until 9 kg/20 lbs).
12. This product is not classified as toy.
13. DO NOT open or fold the product until the child left it.
14. This product can be used for a long time.
15. When the music player connected, please make sure setting the volume in a low voice initially.
- 16.DO NOT use if any parts are missing or broken.Never substitute parts.
- 17.Keep the product away from fire.

Using Product

Remote control

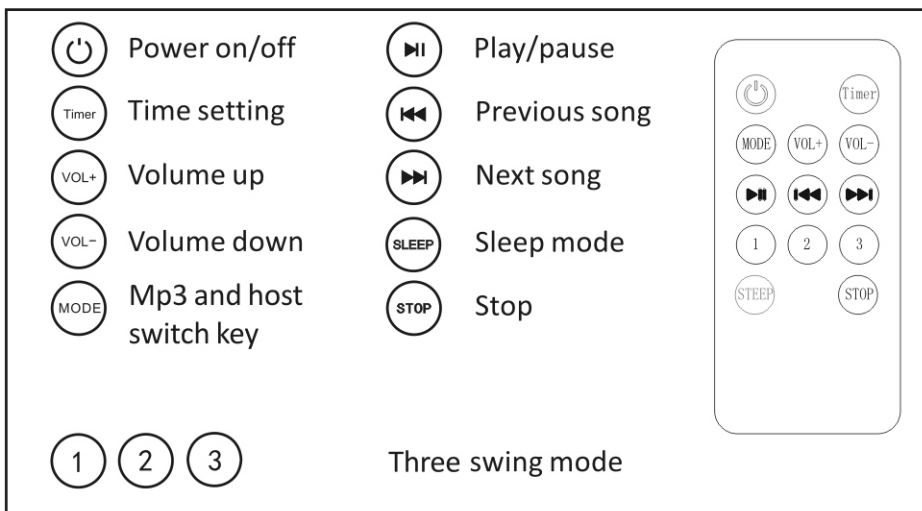

Panel

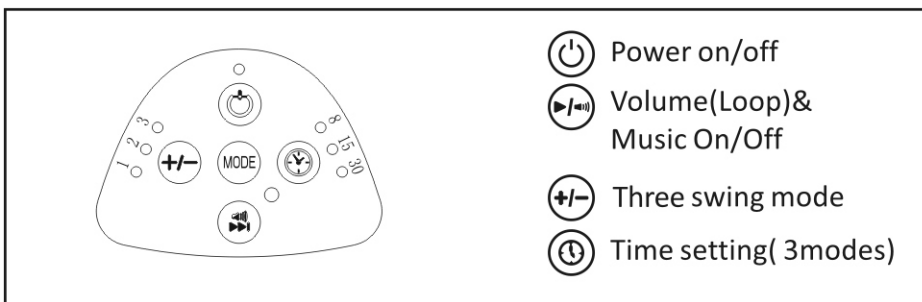


Knowing Product

Using product


The pads and toys are machine washable. Wash them separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly. The frame and toy bar can be wiped clean using a mild cleaning solution and a damp cloth. Do not immerse this product.

Assembling Detail

 
Put the frame in the base,option ① swing+toy bar, ② swing+awning

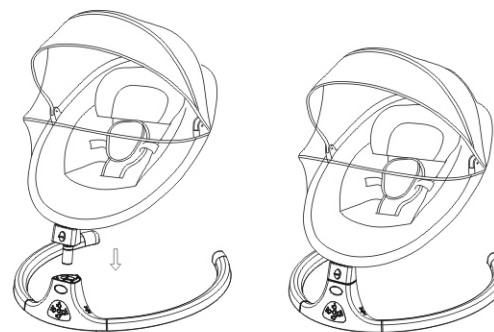

 Pull out the metal plate and pull up the seat when disassembling.

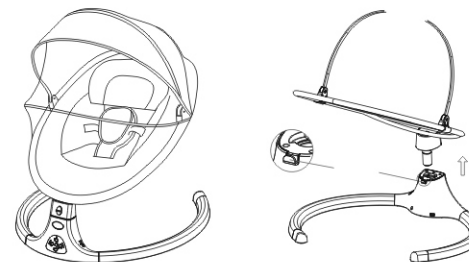

Safety Instruction

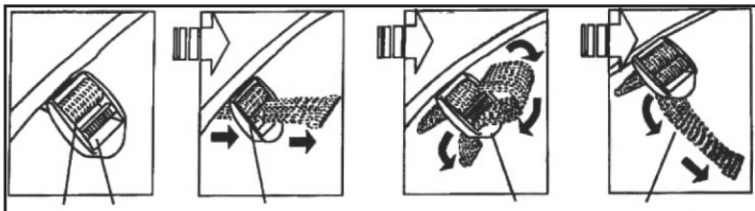


Top hole Bottom hole Through the tape form the top hole first and then through the bottom hole, harden the tape

Put the baby into the seat ,buckle up the seat belts



Adaptor

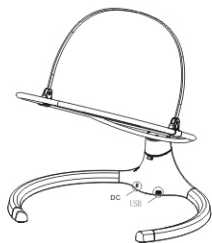

DC plug into the host machine's DC jack, and USB plug is inserted into the USB jack. At last put the adaptor into 100-240V 50/60HZ 0.3A AC outlet.



Using Instruction

- 1, Power switch button: press the button one time and see the indicator light is on ,means power on. Press the button second time and the indicator light is off to shut the power.
- 2, Five swing function mode for choise,and the swing angles are respectively as 16° / 25° / 30° ; When you don't press the button of swing program or the button of timer,the indicator light will keep twinkling.
- 3, Timer: press the button of timer for the first time to set 8 mins swing, press the second time to set 15 mins swing and press the third time to set 30 mins swing.
- 4, This product can support a U disk inserted to play music.
- 5, Music/Volume: press the button one time ,music begins to play.Press it on second time ,it plays the next song.Long press to choose the proper volume for baby.Press the button longer ,then close the music.When you insert a U disk,it will play the music of the U disk automatically.
- 6, The bluetooth function: open your phone's bluetooth and search the BUTYO for matching. When you hear the tone mean it connects succefully, and you can play music right now. You can adjust the volume by your phone also.