

Customer Information

Important: Please keep this instruction sheet for further reference, as it contains important information.

- Please read all instructions before use of the bouncer.
- Adult assembly is required.
- Tool needed for assembly: Philips screwdriver (not included)
- Use till the child is able to sit unassisted, maximum till 12kg
- Never use for child that can sit unassisted

Warning

- Fall Hazard: Child's activity may move bouncer. Use only on floor, never use on elevated surface.
- Suffocation Hazard: Never use on a soft surface (bed, sofa, cushion), as seat may tip over and cause suffocation.
- Never leave child unattended
- Always use restraint system
- Never use for child that can sit unassisted
- The toy bar is not a carry handle, Never use the toy bar to lift or carry bouncer
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries
- Remove batteries before putting infant bouncer into storage for prolonged period of time.

Imported & Marketed by

Brainbees Solutions Pvt. Ltd.
Corporate & Registered Office Address:
Rajashree Business Park, Plot No: 114,
Survey No. 338, Tadiwala Road,
Near Sohrab Hall, Pune 411 001

Customer Care No. :

02030556310


E-mail:

customercare@brainbees.com

Customer Care Address:

Same as Importer's address

Made in China

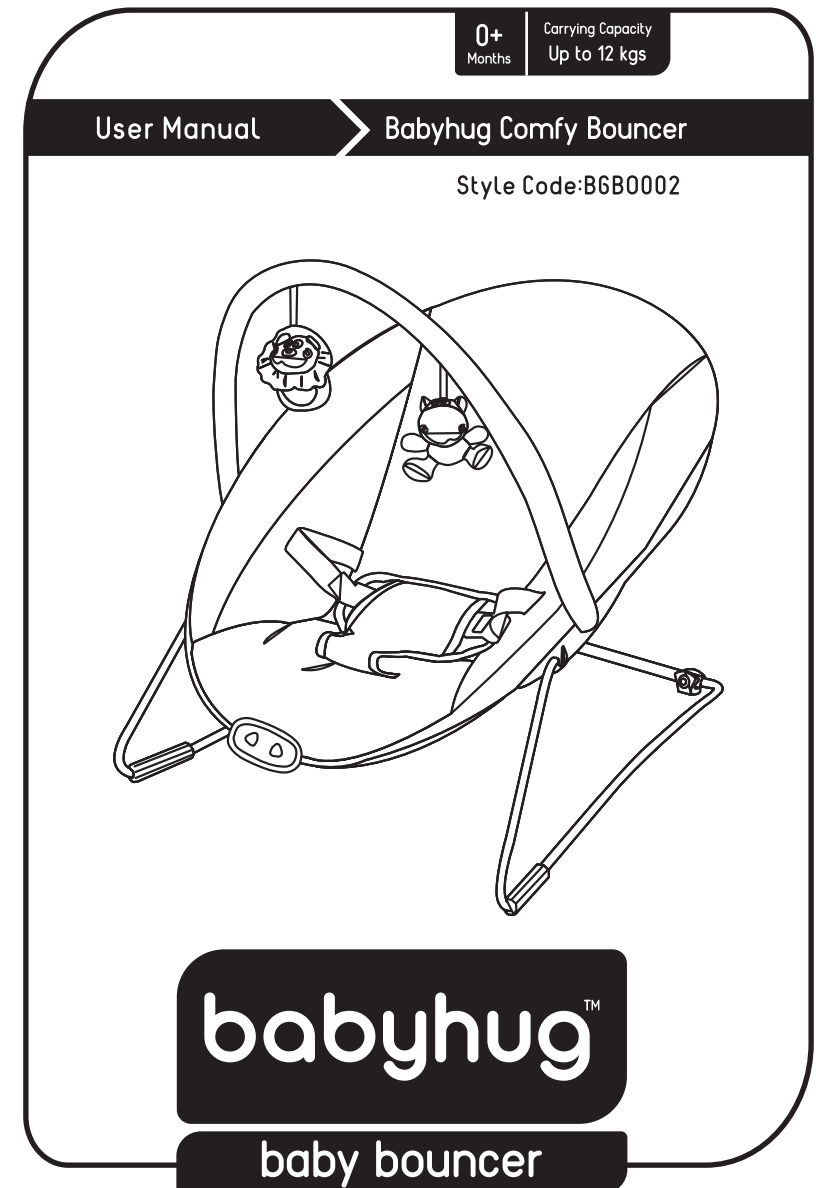

Please read the instructions carefully before use and keep this manual for future reference.

Battery replacement instructions

1. When sound from the toy becomes faint or stops, its time for an adult to replace the batteries
2. Locate the battery pocket on the back of the toy
3. Remove battery from the inside toy
4. Loosen the screws in the battery compartment door with a Philips screwdriver
5. Remove the battery compartment door. Remove old batteries and dispose of safely
6. Insert 2 "C" batteries, as indicated in the diagram in the inside of the battery compartment
7. Replace the battery compartment door and tighten the screws. Do not over tighten
8. Place battery compartment back inside pocket and close the hook & loop fastener securely

Note: Product requires 2 "C" batteries – not included

Battery Tips

- Only an adult should replace batteries
- Non-rechargeable batteries are not meant to be recharged
- Rechargeable batteries are to be removed from the toy before being recharged
- Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries
- Do not mix old and new batteries.
- Always remove exhausted batteries from the toy
- Never short circuit the supply terminals
- Remove batteries from toy during long periods of non-use.
- Be sure to insert the batteries with the correct polarities
- Only use batteries specified in the battery replacement instruction


Parts List





Assembly

1 LEG ASSEMBLY

Insert left leg and right leg into metal tube.

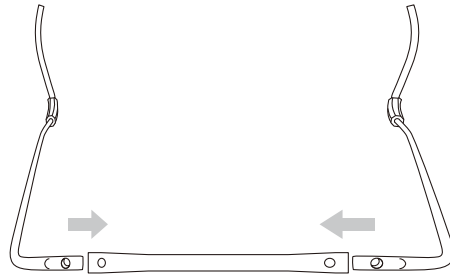


2 Use (2)screws and (2)nuts to assemble

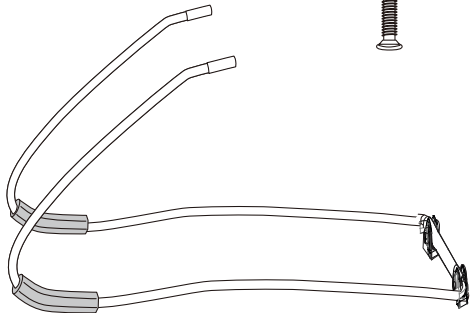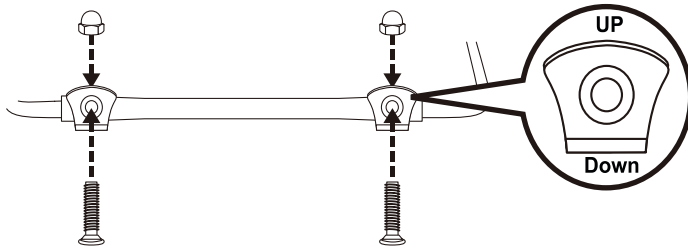


3 FRAME ASSEMBLY

Insert leg assembly into top bar, bottom

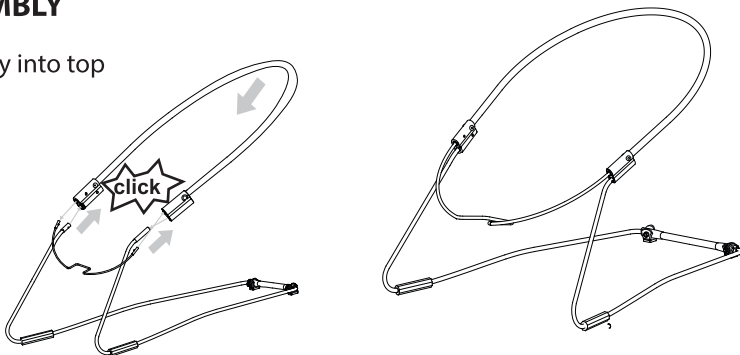


4 Fabric seat assembly

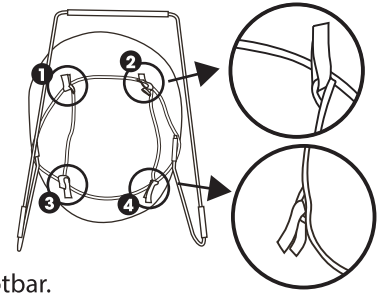


5 Vibration/sound assembly

Insert music and vibration module into the footbar.

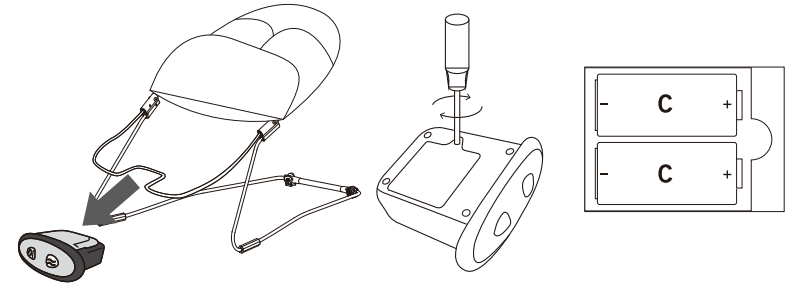

6 Toys and toy bar assembly

Insert toy bar frame into holes of fabric seat each side, then fixate to head.

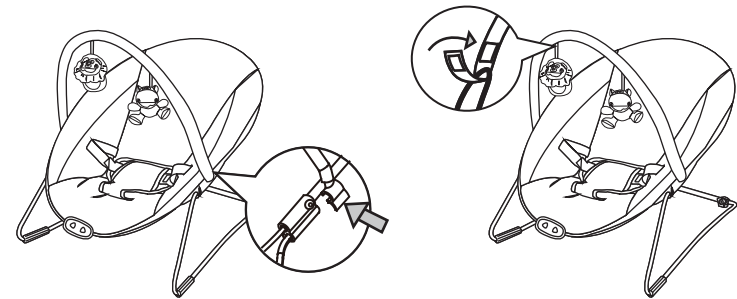

7 Tightening and loosening belts

