

Read this instruction manual carefully to understand the use of the product. Follow the safety instructions properly.

WARNING AND CAUTION

- This tricycle is suitable for the age group 1.5 to 3 years.
- Never leave the child unattended when in use.
- Avoid using the tricycle on or near threshold, stairs, slopes, crowded streets, and uneven surfaces.
- To avoid tip-over, place tricycle on a flat, level surface.
- Do not allow other child to push or play with the tricycle while there is a child in it. This may result in unwanted accidents.
- Maximum carrying capacity of this tricycle is 25 kg.

ROUTINE MAINTENANCE

Please give the tricycle a regular check and maintenance to avoid accidental injuries.


- Check all the parts of the tricycle before use. Repair/replace the damaged parts, as required, immediately.
- Lubricate the rotary parts of the tricycle regularly.
- Do not allow children to touch the moving parts while the tricycle is in action.
- Also, child's clothes or other articles should be at a safe distance from the moving parts of the tricycle.
- This tricycle contains small parts for assembly, please store them carefully and keep them out of children's reach.

Imported and marketed by
Brainbees Solutions Pvt. Ltd.
Corporate & Registered Office Address:
Rajashree Business Park, Plot No: 114,
Survey No.338, Tadiwala Road,
Near Sohrab Hall, Pune 411001

Customer Care No. : 020-46608179
E-mail: customercare@brainbees.com

Customer Care Address:
Same as Importer's address

Made in PRC

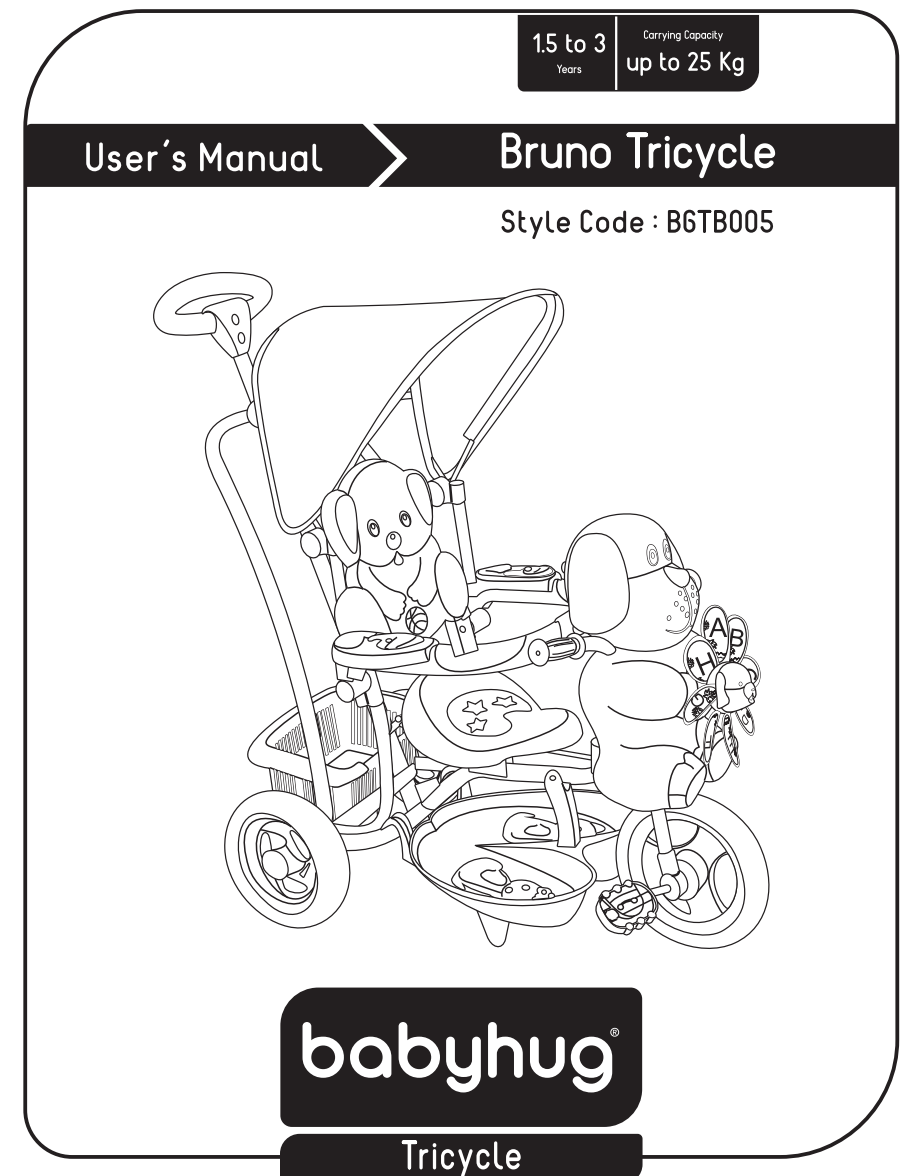


- Safety Bar
- Push Handle & Footrest
- Foldable Canopy
- 2 in 1 Function


Please read this manual carefully before using the product.

Assembly Instructions


(Adult assembly is required. Please read the instructions carefully.)

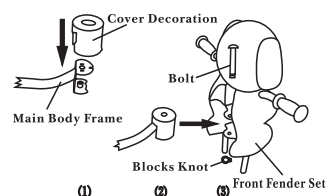


Push the main body frame into the cover decoration, then put them onto the front fender set. Insert the bolt through, and then press the blocks knot into the bolt slot.

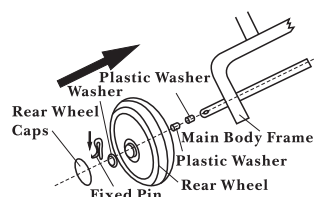


Insert the rear wheel axle into the plastic washers and the rear wheel. After that, put the washer inside, insert the fixed pin into the rear wheel axle, and main body frame. Then, bend the end of the plastic washer fixed pin. (Follow same method for rear wheels).

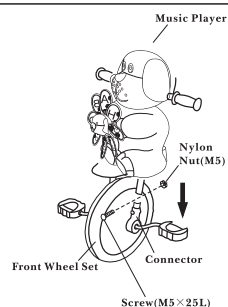


Insert the front fork set into the connector on the front wheel set. Tighten using screws (M5 x 25L) and nylon nuts (both sides). Following the arrowhead direction in the picture, fix the player cap and the player windmill onto the music player sequence. Put two batteries of 5 into the music player and press the button to hear the music.

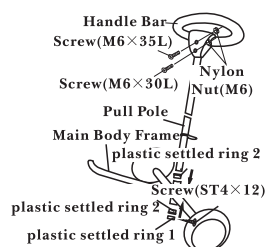


Insert two plastic settled rings into the main body frame, press following the arrowhead direction. Then insert the pull pole into them, and connect the pull pole and the plastic settled ring by the screw (ST4 x 12). Connect and tighten the pull pole and the handle bar by the screw (M6 x 40L), screw (M6 x 35L) and nylon nuts.

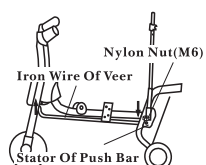


Connect the front of the iron wire of veer to the hole of the front fork. Connect rear to the stator of the push bar, use the nylon nut to tighten (M6).

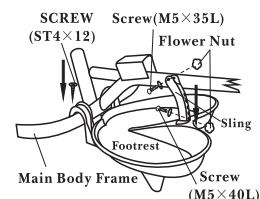


Put the sling into the footrest, then tighten with the screw (M5 x 40L) and flower nut. Put the two rear hooks of the footrest onto the main body frame, then tighten with the screw (ST4 x 12L). Connect the front of the footrest to the main body frame, with the screw (M5 x 45L) and the flower nut.

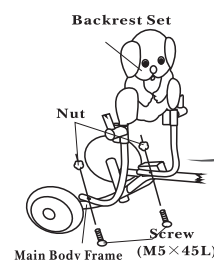

Connect the backrest set and the main body frame, and use the screws (M5 x 45L) and the flower nuts to tighten.


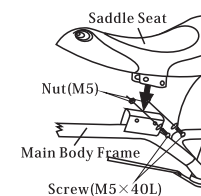


Connect the saddle seat and the main body frame by the screws (M5 x 40L), and the nuts.

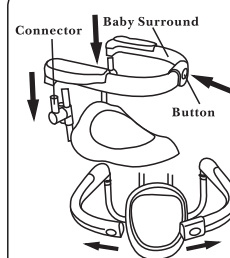

Insert the connector into the safety bar until fixed. (See diagram). Fix the safety bar after your baby is seated. To remove the safety bar, press the button and pull it outwards from both the sides.

Insert the rear basket into the iron pipe of the main body frame

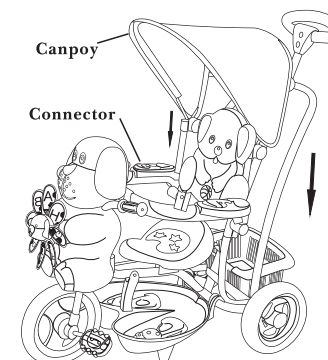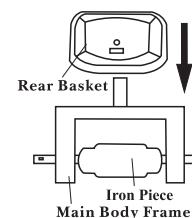

Insert the canopy into the connector as shown by the arrowhead in the picture.