

babyhug™

baby walker

Warning

- 1) Inspection and adjustment must be done before using the walker.
- 2) The height of the cushion should be properly adjusted to avoid the babies falling out.
- 3) Make sure all the locking devices are in the locked state before use.
- 4) Avoid using baby walker on or near threshold, stairs or irregular places; it may result in serious injury.
- 5) Do not use baby walker on a slope driveway or street.
- 6) Do not allow other child to push the baby walker when there is baby in it.
- 7) Do not use the baby walker when the baby can walk independently.
- 8) Never leave your baby unattended when in use.

Maintenance

- 1) To avoid accidental injury, inspect the baby walker on regular basis.
- 2) Please check all the parts for any damage or rupture and change them if required before using the walker.
- 3) Seat cloth is hand washable. Babyhug laundry detergent is recommended.
- 4) This walker contains small part for assembly purpose, please store them carefully and keep away from baby.
- 5) Do not use or store the baby walker at irregular, damp, cold or high-temperature places for a long time.

Imported For & Marketed By:

Brainbees Solutions Pvt Ltd
Corporate & Registered Office Address:
Rajashree Business Park, Plot No: 114,
Survey No. 338, Tadiwala Road,
Near Sohrab Hall, Pune 411 001

Customer Care :

☎ 020-30556310
✉ customercare@brainbees.com

Made in PRC

AGE GROUP
6 MONTHS +

Carrying Capacity
UP TO 15 Kgs

User's Manual

First Walk Musical Baby Walker

Stepping with Joy

STYLE CODE : B6BW007




babyhug™

baby walker

■ Parental bar ■ Stopper ■ 4 Levels of height adjustment

Know Your Product Well

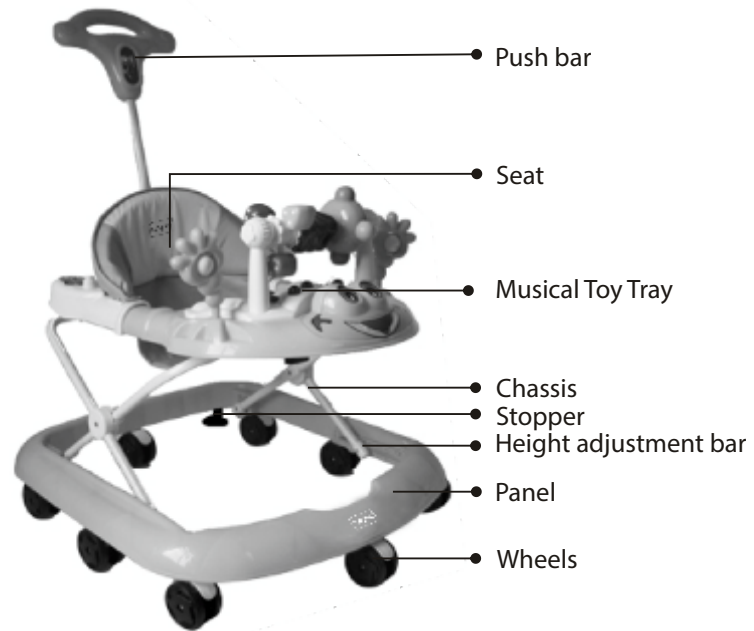

Assembly Instructions


Unfold

Fix the base and pull the panel up to the needed height level, make sure the safety device is in locked state.



Install Wheels

Install the wheels in the chassis by hands. It doesn't required any auxiliary tools for fitting.

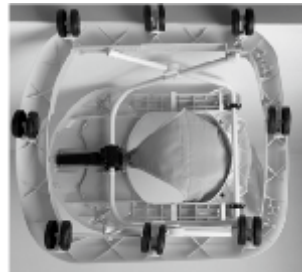


Install Stopper

As shown in picture, insert the stopper into the plastic holes in chassis and tighten it with 4 pieces of 4 mm screws. When in use, rotate 90° towards right and when not in use rotate 90° degree towards left.




Adjust the Height

As shown in picture, fix the base then press down or pull up the panel to the needed height, make sure the safety device is in the locked state.

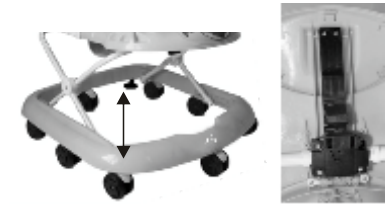

Adjust the Panel

As shown in picture, press the left and right side button on the panel, move the panel front and rear to adjust the space.

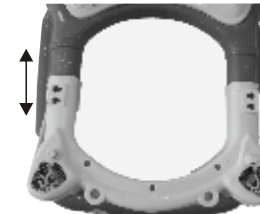

Install Seat Cushion

Insert the plastic bolts into the holes around the panel. Put the plastic stick through the seat cloth's hole and then tighten with screws.



Install the Toys

Insert the toys into the holes of the toy tray.



Install the Parent Push Bar

Insert the bar into the hole located at the backside of the walker.



Install the Battery Music

Insert the toys into the holes of the plate. Open the battery lid on the music box, put two 1.5V batteries inside, close the battery lid, tighten with screw.

