

Maintenance

- 1) To avoid accidental injury, inspect the baby walker on regular basis.
- 2) Please check all the parts for any damage or rupture and change them if required before using the walker
- 3) Seat cloth is hand washable. Babyhug laundry detergent is recommended.
- 4) This walker contains small part for assembly purpose, please store them carefully and keep away from baby.
- 5) Do not use or store the baby walker at irregular, damp, cold or high-temperature places for a long time.

Warning


- 1) Inspection and adjustment must be done before using the walker.
- 2) The height of the cushion should be properly adjusted to avoid the babies falling out.
- 3) Make sure all the locking devices are in the locked state before use.
- 4) Avoid using baby walker on or near threshold, stairs or irregular places; it may result in serious injury.
- 5) Do not use baby walker on a slope driveway or street.
- 6) Do not allow other child to push the baby walker when there is baby in it.
- 7) Do not use the baby walker when the baby can walk independently.
- 8) Never leave your baby unattended when in use.

Imported For & Marketed By:

Brainbees Solutions Pvt Ltd Corporate & Registered Office Address: Rajashree Business Park, Plot No: 114, Survey No. 338, Tadiwala Road, Near Sohrab Hall, Pune 411 001

Customer Care:

- © 020-30556310
- customercare@brainbees.com

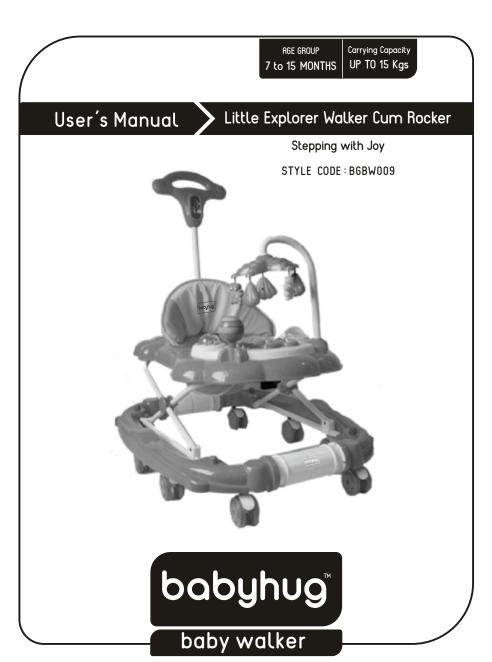

Removable Seat 4 Levels of Height Adjustment Engaging Toys

Know Your Product Well



Assembly Instructions


Unfold

Fix the base and pull the panel up to the needed height level, make sure the safety device is in locked state.



Install Wheels

Install the wheels in the chassis by hands. It doesn't required any auxiliary tools for fitting.

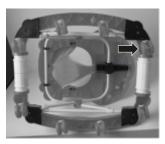


Adjust the Height

As shown in picture, fix the base then press down or pull up the panel to the needed height, make sure the safety device is in the locked state.



Install Seat Cushion

 Insert the plastic bolts into the holes around the panel. Put the plastic stick through the seat clothes hole and then tighten it with screws.





Install the Battery Music

Install two batteries, press any one of the key for music. For changing the batteries, open the cover of battery box, take out the used battery and put in the new ones. Then put the cover back and lock it with the screw.



Panel Adjustment

Reconstruction in Rocking Base



When using rocking function

Turn the white knob to open state. Press two red buttons on one side of the chassis and then turn the chassis in inward direction. Same procedure applies for the other side.

