

Age Group
0 to 6 Months+

Carrying Capacity
Upto 15 kg

User's Manual

Babyhug Candy 2-in1 High Chair

Style Code - B6HC014





babyhug[®]

baby high chair

- 2 in 1
- Removable Double Feeding Tray
- Cushioned Seat
- 5 Point Safety Harness

Please read the instructions carefully before using highchair. And keep it safe for future reference.

Installation instructions

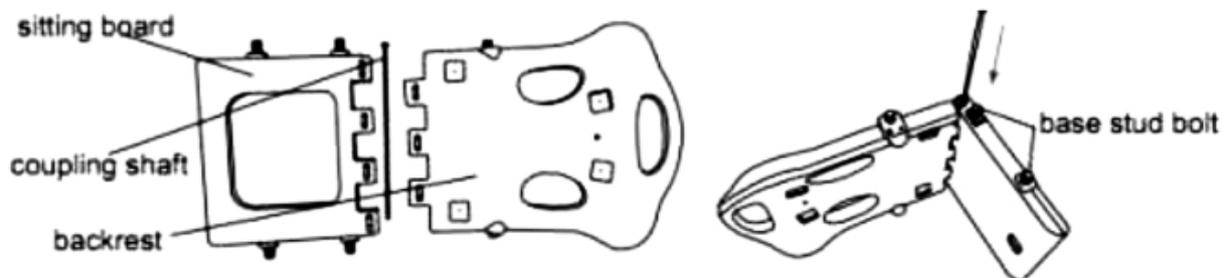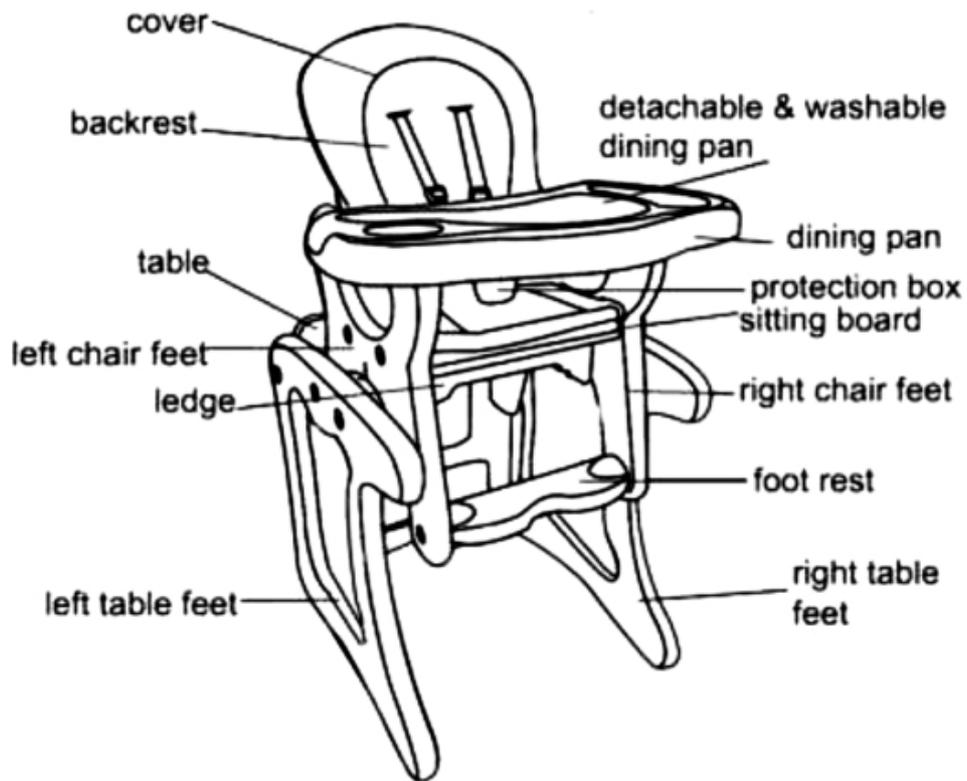

1. Align the back rest and seat pad of the chair together and insert the coupling rod into the hole till end. (As shown in Fig 1 & 2)

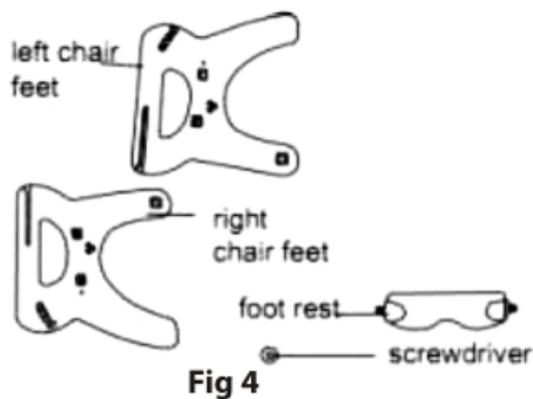


Fig 4



Fig 5

2. Fix the chair seat and foot rest to the right chair feet with the stud bolts. Use a screwdriver to tighten the plastic screws. (See Fig 4). Like wise fix the left chair feet to the seat and foot rest. Tighten the screws with the screw driver. (Fig 5)

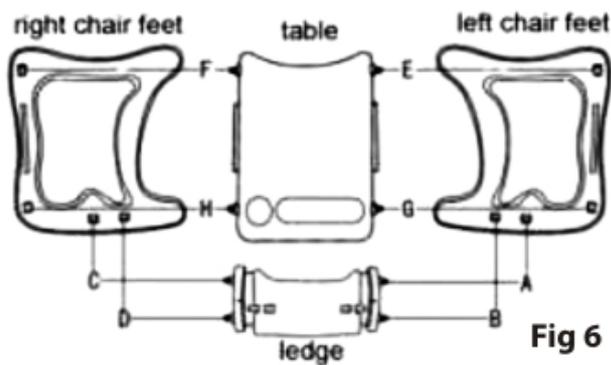


Fig 6

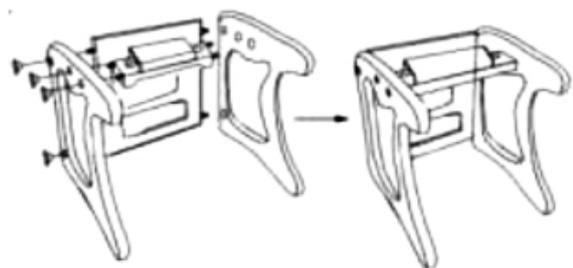


Fig 7

3. Fix the table top and ledge to the left table feet in the corresponding holes and tighten the screws. Like wise fix the right table feet accordingly. (Fig 6 & 7)



Fig 8



Fig 9

Installation of High chair.

Align the chair to the table as shown in Fig 8. Press down gently until you hear a click sound. (Fig 9)

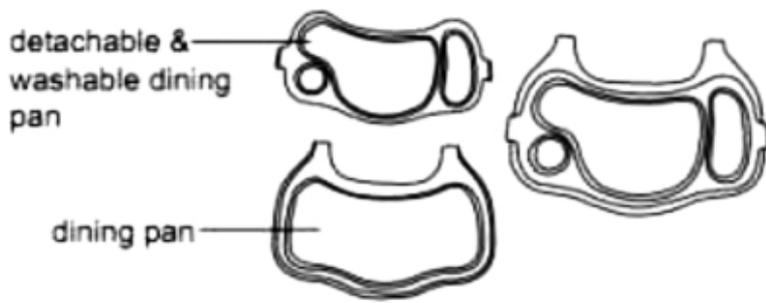


Fig 10

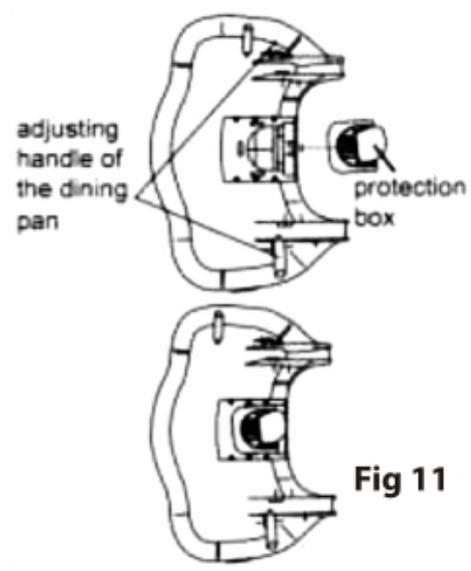


Fig 11

Dining tray: Installation and Adjustment

Fix the removable dining pan to the dining tray as shown in Fig 10.
 Insert the leg separation/ protection bar to the slot provided at the bottom of the dining tray as shown in Fig 11.

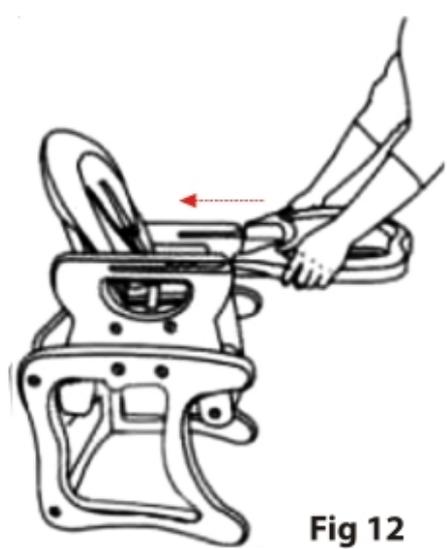


Fig 12

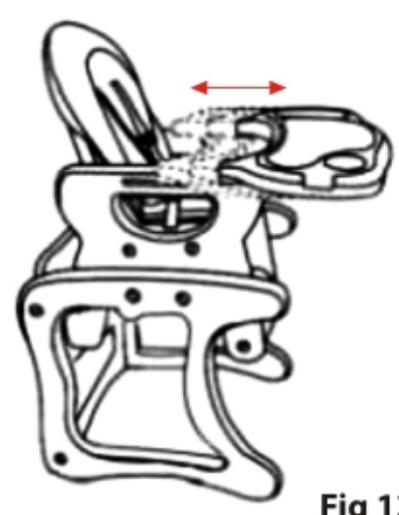


Fig 13

After fixing the protection bar, press the tray lock at the bottom of the tray to release position and slowly slide the dining tray to the chair as shown in Fig 12.
 Dining tray can be fixed at 3 different lengths. Fig 13. Please make sure the dining tray is fixed at the same length on both sides.

Chair Backrest Adjustment

Press the lock at the back of the chair and position the back rest to the desirable position. The back rest can be set at 3 different positions. Fig 14

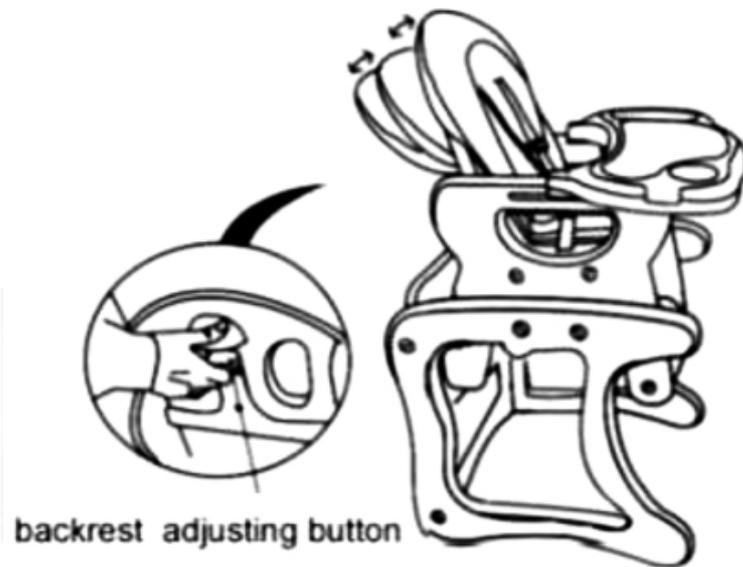


Fig 14



Fig 15

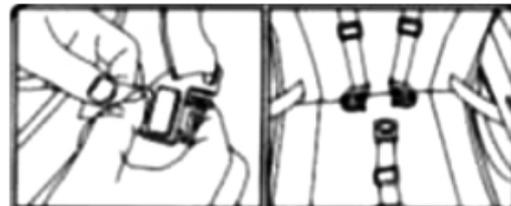


Fig 16

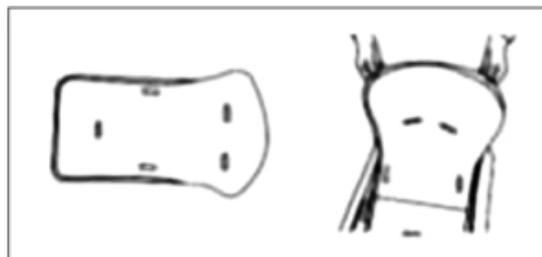


Fig 17

Removing the cover

Press the locking mechanism to open the buckle (Fig 15)

Press the button to the side to release the clips. (Fig 16)

Remove the safety belts from the cover through the holes and remove the cover. (Fig 17)



Fig 18

Study table and Chair

to remove the chair from the highchair, press the release button below and gently remove the chair. Tilt the table so that the table top is facing up. (Fig 18)



Fig 19

Seating the child on the highchair

1. Seat the child on the highchair after fixing the chair to the table (Fig 19)
2. Fix the safety harness by buckling the locks of the shoulder strap and leg separator.
3. Adjust the harness length according to the child's height. (Should not be too tight or very loose)
4. Fix the dining tray

Warning!

Adult installation required.

Do not leave the child unattended in the highchair

Make sure the safety harness is securely fixed.

Do not place the highchair in the vicinity of heat source, electricity gas fire etc.

Use the highchair in flat sturdy surface only

Do not use the highchair in slopes, slippery surface or near steps.

Stop using the highchair when the child is able to sit up unattended

Stop using the highchair if any part is broken, torn or missing.

Check and tighten the screws if required before every use.

Imported & Marketed By:

Brainbees Solutions Pvt Ltd
Rajashree Business Park, Plot No: 114,
Survey No. 338, Tadiwala Road,
Near Sohrab Hall, Pune 411 001

Customer Care :

☎ 020 - 46608179
✉ customercare@brainbees.com

Customer Care Address:

Same as Importer's address

Made in China