## Warning

Read These Instructions Carefully Before Use And Keep Them For Future Reference. Failure To Follw These Warnings And The Assembly Instructions Could Result In Serious Injury Or Death

- 1. Do Not Use The Product If Any Parts Are Broken, Torn Or Missing And Use Only Spare Parts Approved By The Manufacturer
- 2. Always Use Harness
- 3. Never Leave Child Unattended
- 4. Stop Using Product When Child Attempts To Climb Out Or Reaches 12kg
- 5. It Is Dangerous To Place This Product On An Elevated Sureface. Always U Se On A Flat, Level Floor
- Be Aware Of The Risk Of Open Fire And Other Sources Of Strong Heat, Such As Electic Bar Fires, Gas Fires, Etc. In The Vicinity Of The Product
- 7. This Product Is Not Intented For Prolonged Period Of Sleep. Should Your Child Need To Sleep, Then Place The Child In A Suitable Cot Or Bed
- 8. Do Not Use The Product Without The Seat Cushion
- 9. Discontinue Using Your Product Should It Become Damaged Or Broken For Safe Battery Use
- 1. Keep The Batteries Out Of Children's Reach
- 2. Only The Recommended Batteries Or Equivalent Are To Be Used, Volts And Size
- 3. Batteries Are Inserted With The Correct Polarity
- 4. Remove Exhausted Batteries From The Product
- 5. Do Not Short-circuit Supply Terminals
- 6. Rechargeable Batteries Are To Be Removed Before Being Charged
- 7. Rechargeable Batteries Are Only To Be Charged Under Adult Supervision
- 8. Any Battery May Leak Battery Acid If Mixed With A Different Battery Type, If Inserted Incorrectly (put In Back-wards) Or If All Batteries Are Not Replaced Or Recharged At The Same Time. Do Not Mix Old And New Batteries. Do Not Mix Alkaline, Standard (carbon-zinc) Or Rechargeable (nickel-cadmium) Batteries
- 9. Any Battery May Leak Battery Acid Or Explode If Disposed Of In Fire Or An Attempt Is Made To Charge A Battery Not Intended To Be Recharged
- 10. Never Recharge A Cell Of One Type In A Recharger Made For A Cell Of Another Type
- 11. Discard Leaky Batteries Immediately. Leaky Batteries Can Cause Skin Burns Or Other Personal Injury. When Discarding Batteries, Be Sure To Dispore Of Them In The Proper Manner, According To Your State And Local Regulations
- 12. Always Remove Batteries If The Product Is Not Going To Be Used For A Month Or More. Batteries Left In The Unit May Leak And Cause Damage
- 13. Recommended Type Batteries-alkaline Disposables, Size D(Ir20-1.5v) Never Mix Battery Types. Change Batteries When Product Ceases To Operate Satisfactorily

### Imported & Marketed by

Brainbees Solutions Pvt. Ltd. Corporate & Registered Office Address: Rajashree Business Park, Plot No: 114, Survey No. 338, Tadiwala Road, Near Sohrab Hall, Pune 411 001

### **Customer Care No.:**

020 46608179

#### E-mail:

customercare@brainbees.com


#### **Customer Care Address:**

Same as Importer's address



- Auto Swinging Motion
- Remote Controlled
- AC/DC function
- Infant Head Support

# standard configuration parts

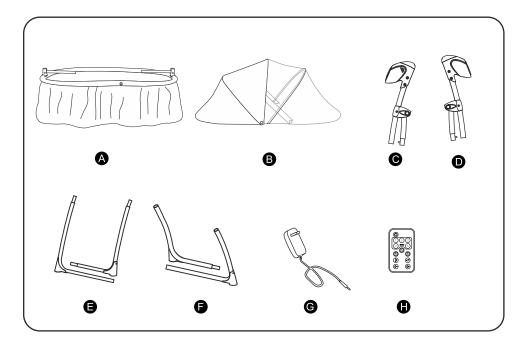



- A. Bassinet
- B. Canopy and net
- C. Left driving part group

- D. Right driving part group
- E. Front leg
- F. Rear leg


- ${\sf G.\,Adapter}$
- H. Remote Control


## **Remote Control Functions**

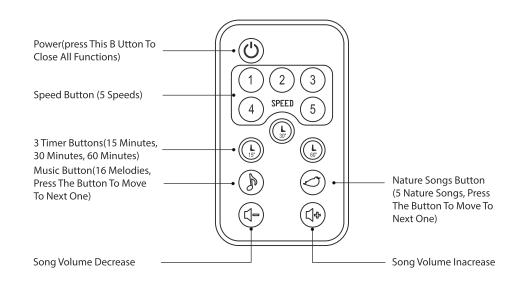

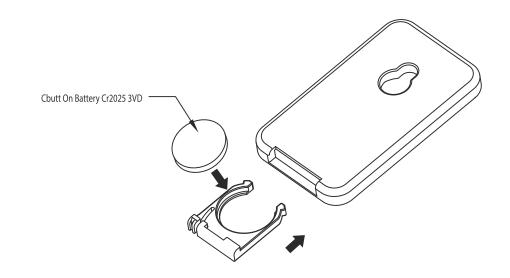


## Swing Control Plate Instructions

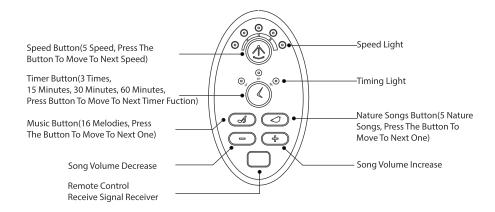


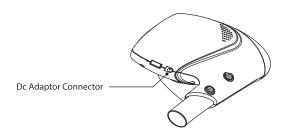




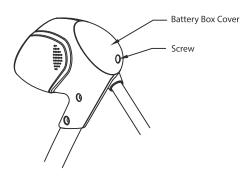

 
1. As in the picture, insert the left tube of font leg into the right one until a "Click" the same as the rear leg.

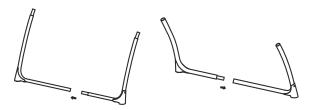


2. Open the 2 driving system parts until a "click".

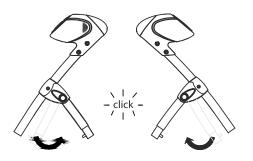

3.Install the front legs and rear legs by insert the two legs into theupper part tube until a "click"

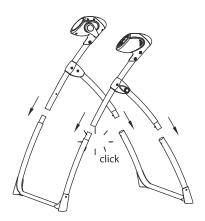

4. Unfold the bassinet (A) as below picture.

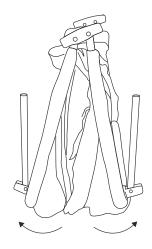

5.As picture, Open two hanging tubes up and insert them separately into the plastics hole of driving parts until the shrapnel pop-up.



6.Install mosquito net, connect the mosquito net and canopy with zipper, like in the picture.

