

Bonfino

Imported for & Marketed By:

Brainbees Solutions Pvt. Ltd.
Corporate And Registered Office Address:
Rajashree Business Park, Plot No.:114,
Survey No.338, Tadiwala Road,
Near Sohrab Hall, Pune 411001

For any feedback contact:

Customer Care Executive No.: +91-135-3501241
or E-mail: customercare@brainbees.com
Customer care Address:
Same as Marketer's Address.

Bonfino


Relish High Chair User's Manual

Age Group

6-36
MONTHS




3in1
DESIGN

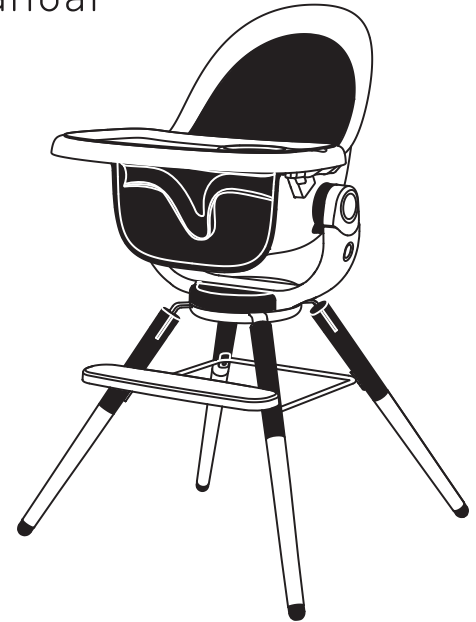

Eco-friendly Wooden Legs

Modern Outlook with Transparent Seat

1. Parts & Accessories

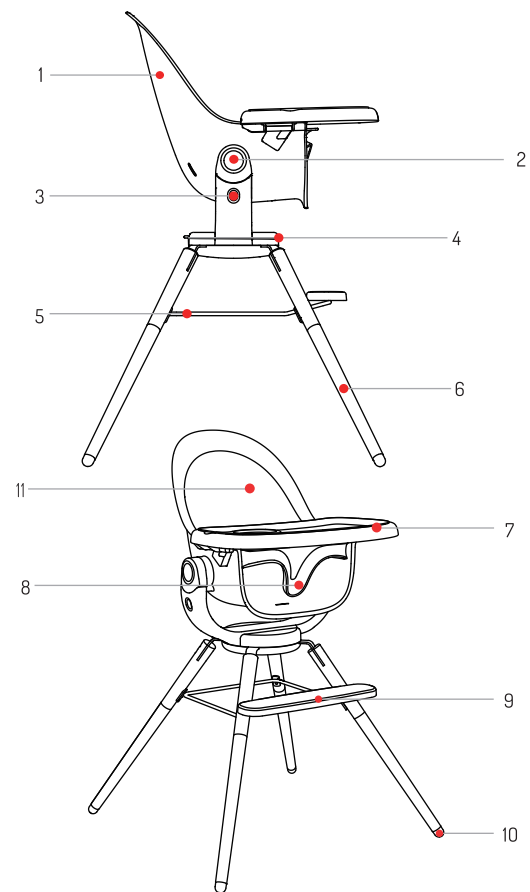

Note – Please take a few minutes to read this manual. This will help you assemble and use the high chair suitably. Keep this manual for future reference.

 

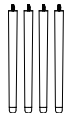 

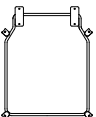 

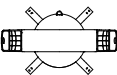 

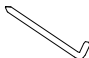 
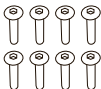 

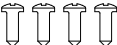 
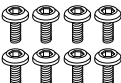 
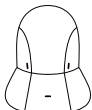 



Before assembly, please double check all parts as shown are included in the package. For any missing or defective parts, or sharp edges, please contact customer service immediately. To guarantee the service life of the high chair, please use it correctly under the instructions and make it through inspection regularly. Never use it if any parts are missing or broken.


1. Seat
2. Reclining Adjust
3. Seat Disassembly Button
4. Swivel Button
5. Support Pole
6. Wooden Leg
7. Tray
8. T-Bar
9. Footrest
10. Foot Pad
11. PU Cushion

Assembly Instructions


Highchair Installation

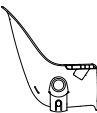Take out the highchair and accessories from the box. Please refer to the below image:


				
Seat	Upper legs X4	Bottom Legs X4	Tray	Support pole
				
T-bar	Swivel Part	Footrest	Screw Driver X2	Screw M6X30 (X8)
				
Screw M6X20 (X4)	Screw ST4X16 (X4)	Screw nut M4*10X(8)	PU Cushion	
<p>Insert upper legs(marked A/B/C/D) into down legs(marked A/B/C/D)</p> <p>NOTE: The upper and lower leg must align properly.</p> <div> Clockwise move tight</div> <div> Anticlock move loose</div>				

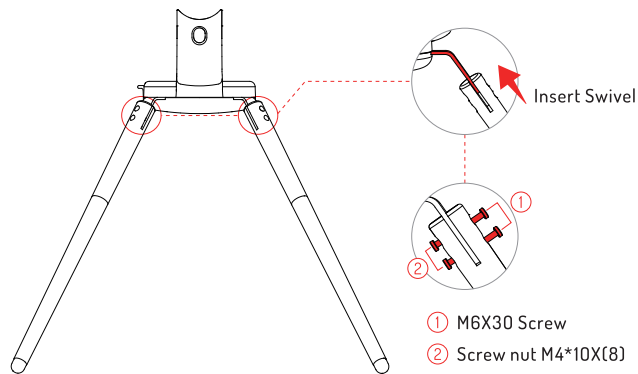


Insert the legs into the swivel part, and tighten with screw nut & screw M6*30.
(Note: Screw nut is inside, screw is outside)

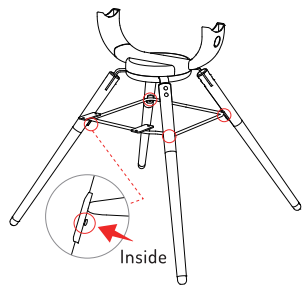


Install support pole into legs with screws M6*20 and tighten the attachment securely.

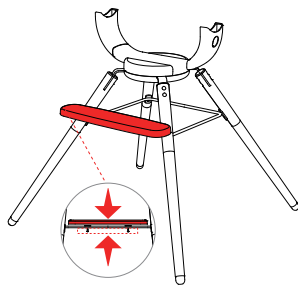

Assemble the footrest onto the front of the support pole, tighten with screw ST4*16.

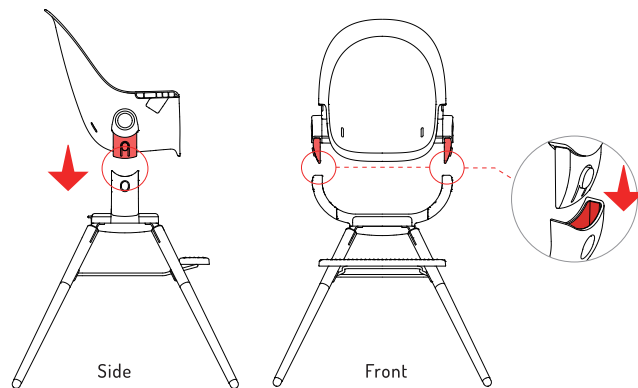


Insert the seat into both sides of the swivel part until you hear a "click" sound.

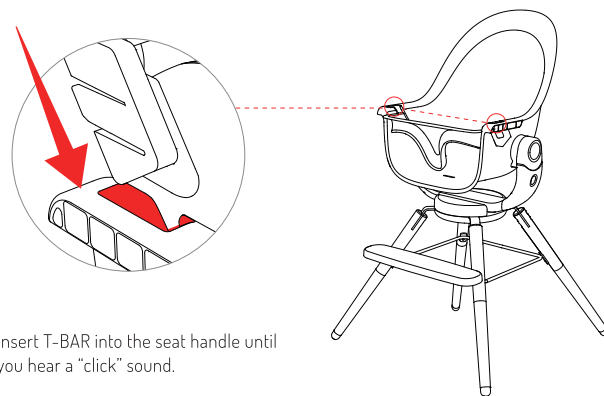


Insert T-BAR into the seat handle until you hear a "click" sound.

Adjusting the Tray

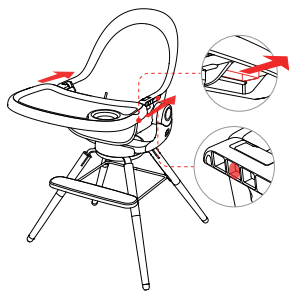


Hold buttons on both sides of the tray, pull outward at the same time. Insert the tray into the seat handle until you hear a "click" sound.

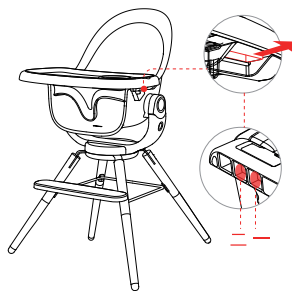

The tray can be adjusted into 2 positions. Pull the outward button to adjust positions.


Adjusting the Recline

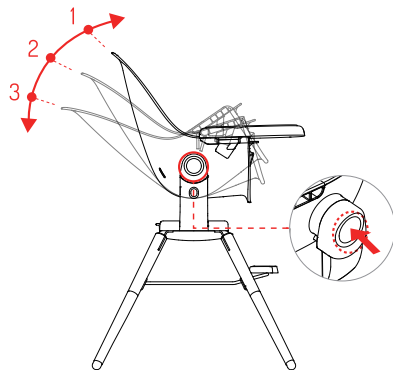

Press both sides of the reclining buttons to adjust. There are 3 positions for adjusting the recline.


NOTE: Position 1 must be used for 6 months+ babies while the 2 & 3 Positions are recommended for 0-6 months old baby.

Adjusting the Chair Seat Swivel

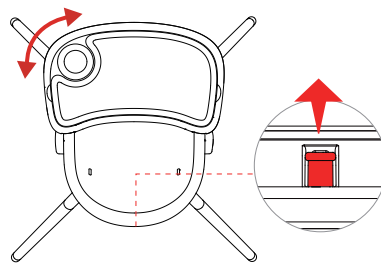


Pull the swivel button upwards to adjust to a different position. In total, there are 4 positions, 90 degrees/position.

Adjusting the Harness

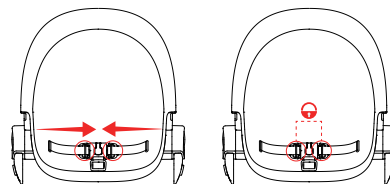

When fastening the seat belt, insert the waist belt into the central buckle until you hear a "click" sound to make sure it is well tied.

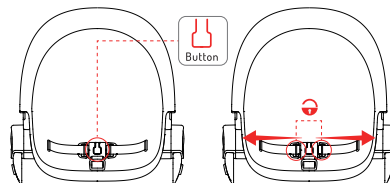

For unfastening the seat belt, press the central button.



- Adult assembly required.
- Never leave the child unattended.
- Always keep the child in view while in the highchair.
- Always use restraints, and adjust to fit snugly.
- Stay close and watch the child during use.
- Secure your child at all times with the restraint system provided, both in the reclined and upright positions.
- The tray is not designed to hold your child in the chair.
- It is recommended that the high chair be used only by children capable of sitting upright unassisted.
- Always lock the wheels when the child is sitting in the high chair, or when the highchair is open but not in use.
- Ensure placing the highchair on a horizontal, stable surface. Never place the highchair near stairs or steps. Do not move the chair with a child in it.
- The high chair is designed to accommodate one child at a time.
- Discard use if any part is broken, torn, or missing.
- Ensure that all components are correctly fitted and adjusted before and after each use.
- Do not place any heavy bags, packages, or other items on the highchair tray. They may cause the chair to tip over.
- This highchair is recommended for children who can sit upright unassisted OR do not weigh more than 15 kg and are not more than 36 months old.
- Do not place the chair near any heat source, electric bar, fires, gas fires, etc., or where a child could gain access to any other kind of hazard.

- Ensure all users are familiar with the product's operation. It should always open and fold easily. If it does not, do not force the mechanism, instead refer to the assembly instructions.
- All hazards such as electrical flex should be kept out of reach of the child in the high chair.

Wash Care Instructions

Maintenance

- Periodic maintenance is required to ensure the high is in good working order.
- Regularly check all parts of the product to ensure that they are operating correctly and for any signs of wear or damage.

Cleaning

- Never clean any part of the highchair with abrasive, ammonia-based, bleach-based or spirit-type cleansers.
- Ensure the product is completely dry after cleaning before use or storage.
- Make sure the highchair is stored in a dry place to prevent mold or mildew development.
- Frame Cleaning: Wipe with a damp cloth and wipe dry with a soft cloth.
- Harness Cleaning: Sponge clean with a mild soap and water solution. Rinse and wipe dry.