

INSTRUCTION MANUAL



> PARTS LIST



> HOW TO ASSEMBLE BABY WALKER

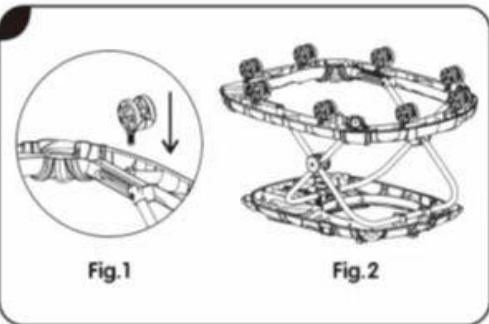


Fig.1

Fig.2

1. HOW TO ASSEMBLE WHEELS .
As shown in the (Fig.1), insert the wheel into the hole of the bottom board . (The inserted part must be fixed onto the position) .

2. HOW TO ASSEMBLE THE CUSHIONED SEAT .
As shown in the (Figs . 3 and 4), insert the cushioned seat snap into the mounting hole to clip the plate .
*Note : the seat must be fixed correctly into its place .

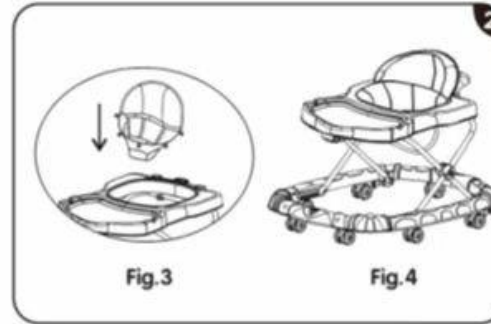
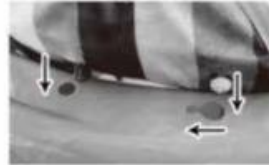


Fig.3

Fig.4



Fig.5

Fig.6

Fig.7

3. HOW TO ASSEMBLE MUSICAL TRAY AND TOY .
As shown in the (Figs . 5 , 6 and 7), put the musical tray onto the mounting position on the plate with its both sides buckling top base , you should insert before the toy into the mounting hole on the musical tray until hear a " click " .

4. HOW TO ASSEMBLE THE PUSHING HANDLE .
As shown in the (Figs . 8 and 9), insert the pushing handle into the mounting holes before rotate the knob 90 degrees to clip the bar onto the top base .




NOTE!
"IF INCLUDED
"NOTA"
"SE DEBE INCLUIRE"

Fig.8

rotate the knob
90 degrees

Fig.9

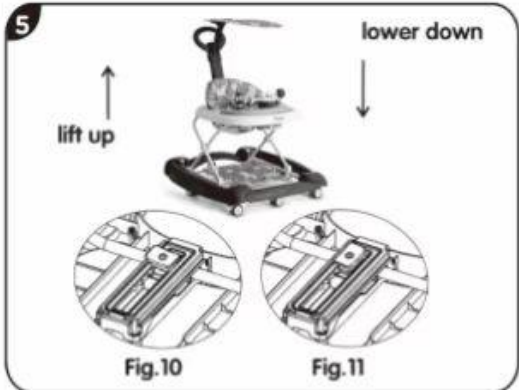

5 . INSTRUCTION OF LIFTING UP OR DOWN THE TOP BASE .

Adjust the height of the top base to suit the baby height . To adjust the walker upwards , just lift up the plate , or to adjust the walker downwards , just rotate the adjusting button as shown in (Fig . 11) , and then put the walker downwards

After adjusting the height , please rotate the button back as shown (Fig . 10)



6 . INSTRUCTION FOR THE FUNCTION AS A MECESSOR.

Press the open / close button,press the four buttons of rotation of the bottom plate at the same time, turn the bottom plate as shown in the picture .the walker becomes a rocking chair (Fig . 12) .

> WARNINGS!

WARNINGS!

1. The baby should be supervised by an adult when using the walker.
2. Make sure that all parts are properly assembled.
3. The walker should be used on flat surfaces. It is prohibited to use it on uneven surfaces.
4. After adjusting the seat height, the walker should be lock for use.
5. The maximum weight that supports the walker is 12 kg. Using it for a regulartime of 1 hour and half
6. Check that all parts are not loose or damaged.
7. Recommended for babies from 7-18 months or a maximum height of 75 cm.

MAINTENANCE

1. -Remove the seat from main tray and wipe with a damp cloth, hung to dry in the shade, do not iron and do not squeeze.
2. To clean the plastic and metal parts, onlyuse a damp cloth and dry.
3. Keep walker baby away from stoves, heaters, directsunlight and stairs.