

**! WARNING**

Read the instructions carefully before use and keep them for future reference.

The child may be hurt if you do not follow these instructions.

Before using, remove and dispose of any plastic bags and any other packaging (e.g. fasteners, fixing ties, etc.) and keep them out of reach of children.

- Before using, check that the product and all of its components have not been damaged during transportation. Check regularly that the product is not broken or damaged. If the product is broken or damaged, keep out of reach of children.
- The product must only be assembled by an adult. For the correct assembly of the product, please refer to the following instructions.

**! WARNING**

**STAIR HAZARD:** Avoid serious injury

or death. Block stairs/ step securely before using walker even when using parking brake. • Only use the baby walker frame on flat and stable surface. • Never leave child unattended. • Always keep child in view while in walker.



**! WARNING**

The child will be able to reach further and move rapidly when in the walking frame. Prevent access to stairs, steps and uneven surfaces, slopes or unstable floors, swimming pools or other sources of water.

- Guard all fires, heating and cooking appliances
- Remove hot liquids, electrical flexes and other potential hazards from reach.
- Prevent collisions with glass in doors, windows and furniture.
- Do not use the baby walking frame if any components are broken or missing.
- This baby walking frame should be used only for short periods of time (e.g. 20 min).
- This baby walking frame is intended to be used by children who can sit unaided, approximately from 6 months. It is not intended for children weighing more than 12kg.
- Do not use replacement parts other than those approved by the manufacturer.




Read all instructions before assembly and use of the walker. Keep instructions for future use.

The child may be hurt if you do not follow these instructions.

**IMPORTANT! KEEP FOR FUTURE REFERENCE. WARNING! TO BE ASSEMBLED BY AN ADULT!**

## PARTS LIST

Check that you have all the parts for this model BEFORE assembling your product. No tools required.

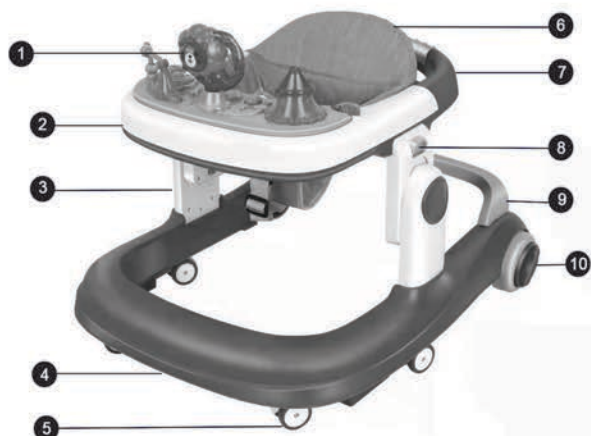

1. 1X Toy Tray
2. 1X Dining Tray
3. 2X Supporter
4. 1X Underpart
5. 4X Universal Wheel
6. 1X Padded Seat
7. 1X Hand Bar
8. 2X Heighten and foldable button
9. 1X Rear Bar
10. 2X Rear Wheel

### Assembling Procedures

1: Turn the underpart both supporters up to 90° as the picture.



2: Turn the dining tray both supporters up to 90° as the picture.



3: Lifting the dining tray Heighten and foldable button. Meanwhile, fix the dining tray both supporters in the hold of underpart both supporters until you hear "click". Press and screw the both locks. Completed it.



4: Remove the rear bar, Child can push to walk when take it way.



### How to Adjust the 5 Grade Height of Baby Walker Frame

In term of pressed and screwed the both locks, lifting the both button while adjust the weight you want until you hear "click." Completed it.



### Function View

1: Adjustable seat pad height to grow with your baby.



2: The rear wheel can be adjustable speed.



3: One button for folding.



## Fitting and /or Replacing Batteries

### ⚠ WARNING

The toy of the walker frame requires 2X"AA" 1.5Volt alkaline type batteries(not included).

- Batteries must only be fitted by an adult.
- To fit and/ or replace batteries: loosen the screw on the battery compartment cover with a suitable screwdriver, press the tab and remove the battery compartment cover. Then remove the spent batteries and fit new ones, ensuring that they have been fitted in the correct polarity, as shown inside the battery compartment. Replace the battery cover and tighten the screw.
- Always keep batteries and tools out of reach of children.
- Always remove spent batteries from the toy to avoid the danger of possible leakage from the battery damaging the product.
- Always remove the batteries if the toy will not be used for a long period.
- Only use alkaline batteries of the same type of equivalent to the type recommended for the correct function of this product.
- Never mix new and old batteries, or different types of batteries. • Do not burn or dispose of spent batteries into the environment.

Dispose of spent batteries at an appropriate differentiated collection point.

- Do not short-circuit the battery terminals.
- Do not attempt to recharge non-rechargeable batteries: they might explode.
- The use of rechargeable batteries is not recommended and cannot be used.

## Product Care and Maintenance

- Check regularly the walker frame for signs of damage or wear.
- Clean the plastic parts, including the stoppers, with a damp cloth.
- Clean the seat with brush or family soap and neutral scour
- Dry the metal parts to prevent the formation of rust.
- Prolonged exposure to direct sunlight may cause the fabric to fade.