Caution

- ⚠ Fasten and use the belt in all conditions.
- ⚠ Do not leave the child on chair unattended at any time.
- ⚠ Do not use the high chair on an uneven surface.
- ⚠ Do not keep any strings around the high chair.
- ⚠ Always check for loose screws, parts, ageing accessories and tattering stitch ends in the product.
- ⚠ The high chair can carry a child weighing up to 18 kgs (6-36 months)
- ⚠ Keep a check on the locks all the time.
- ⚠ Do not let the child be around the chair when not in use.
- ⚠ Do not move the chair with the child in it.
- ⚠ Do not use the chair as a toy when not in use.
- ⚠ Keep away from fire.
- ⚠ Do not put more than one kid on the high chair at one time.
- ⚠ Do not put plastic bags near the child to avoid asphyxia.
- ⚠ Do not place any extra object which may cause danger.

Cleaning and Maintenance guidelines

i. Clean the chair with a sponge and warm water when dirty.
ii. Use friction free lotion to clean the chair.
iii. Add lubricants on active parts regularly.

For product enquiry in India please contact:
Universal Corporation Ltd. | 4/1, Middleton Street, Kolkata 700071 | **Ph:** 033 3090 4238
Email: info@uclindia.com

Luv Lap
Life's little stories

SUNSHINE HIGH CHAIR

User Manual

Features

- Snack tray & play tray
- Additional safety protection device
- Easy to carry & keep
- Safety belt protection
- Easily foldable
- Soft footrest

Kindly read the instructions given in the manual carefully and retain it for future reference.
If the instructions given in the manual are ignored, it may cause threat to the baby's safety.

Loose parts inside the box

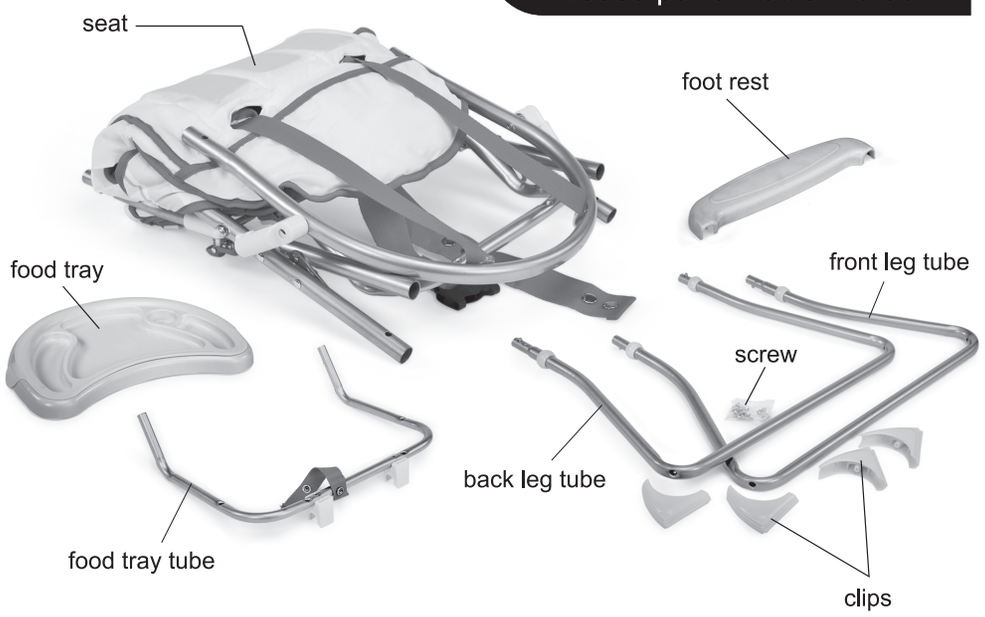

Note: *Keep a screwdriver handy while assembling*
If any part is missing, please inform your distributor/retailer.

Installation Guidelines

1 Unfold the body frame. Check whether the central red lock is properly secured or not. Secure the backrest tube with tube of the chair by pressing the bolts.

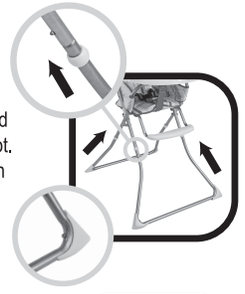

2 Insert the front legs to the channels provided at the front, below the seat. Clasp it with the clamps and the screws provided. Insert the back legs (wider ones) to the channels provided at the back, below the seat. Clasp it with the clamps and the screws provided.

3 Insert the food tray tube into the socket adjacent to the back rest tube. Clasp it with front rod.

4 Fix the food tray with the food tray tube, securing with 4 nut bolts.

5 Attach the footrest with 4 nut bolts to the footrest tube.

6 Attach seat pad to body, covering the backrest tube.

Functional Guidelines

1 To use the food tray as a recreation table detach the white tray provided on it.

2 The high chair can be used just as a chair by removing the food tray.

Folding Guidelines

1 Remove the food tray.

2 Remove food tray tube and the foot rest tray.

3 Loosen the front belt.

4 Push the central lock's red button on two sides of the chair.

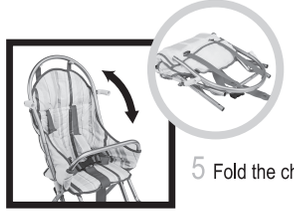

5 Fold the chair holding the food tray tube and the back rest tubes.

Usage of Belt: The belt tightness can be adjusted as required.

Warning: *The belt must be fastened when in use.*