



LuvLap

USER MANUAL

OF GE-A SERIES CHILD CAR RESTRAINT SYSTEM

NOTICE

This is a "universal" child restraint. It is approved to Regulation NO.44, 04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.

A correct fit is likely if the vehicle manufacture has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" child restraint for this age group.

This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice. If in doubt, consult either the child restraint manufacturer or the retailer.

Only suitable if the approved vehicles are fitted with 3 point safety-belts, approves to un/ece regulation no.16 or other equivalent standards.

ECE R44/04
WEIGHT 0-13KG
GROUP 0+

CONTENTS:

1. Applicability (Page 1)
2. Safety Instructions (Page 1-2)
3. Parts and Interior equipment (Page 3)
4. General use (Page 3-4)
 - 4.1 Rotations of the handle (Page 3-4)
5. Securing the infant carrier (Page 4-5)
6. Securing your baby (Page 5-6)
 - 6.1 Setting the shoulder belt height (Page 5)
 - 6.2 Loosening the shoulder straps (Page 5-6)
 - 6.3 Securing the baby with the harness (Page 6)
 - 6.4 The use of security buckle (Page 6)
7. Maintenance and cleaning (Page 6-7)
 - 7.1 Take off the fabric cover (Page 6-7)
 - 7.2 Cleaning of the fabric cover (Page 7)
 - 7.3 Maintenance and cleaning (Page 7)
8. Procedure after an accident (Page 7)

NOTES

Please read through these instructions carefully before using the baby car seat for the first time. You risk endangering your child's life if you use the product incorrectly.

1. Applicability



The baby car seat is suitable for weight categories 0+

Group 0+ 0-13kg

DO NOT place this baby seat on seats equipped with front airbags.



Only suitable if the vehicle is fitted with 3-point static, 3-point retractor safety belts, approved to UN/ECE Regulation No. 16 or other equivalent standards.

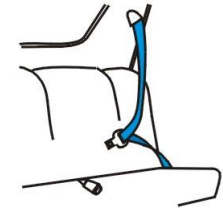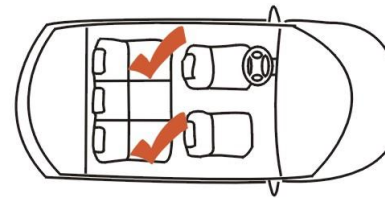


2. Safety instructions

- The instructions can be retained on the baby car seat for its life period in the case of built-in restraints.
- DO NOT place this baby seat on seats with front airbags.
- The baby car seat must be installed rearward-facing (in the opposite direction which you're driving).
- This baby car seat can only be installed using a three-point vehicle belt.
- Before each journey, check whether the baby car seat is installed firmly.
- Do not change the baby car seat in any way.
- Do not leave your baby unattended in the seat at any time.

- Never use the seat as a shopping bag or as a means for transporting something.
- Protect the baby car seat system against direct sunlight otherwise the high temperature will hurt your child.
- Ensure that all parts are locked in place correctly and not panned in the adjustable seats or doors.
- Luggage or other objects liable to cause injuries in event of a collision shall be properly secured.
- The baby car seat must not be used without the cover.
- The seat cover should not be replaced with any other than the one recommended by the manufacturer.
- Periodically inspect the harness, pay particular attention to attachment points, stitching and adjusting devices.
- Do not continue to use the baby car seat if parts have become damaged or have loosened after an accident.
- The handle of the baby car seat has to against the back of the vehicle seat. If necessary, adjust the headrest of the vehicle seat.
- When you drive without a baby in the baby car seat, always secure the system with adult belt.
- Not to use any load bearing contact points other than those described in the instructions and marked in the child car seat.
- We recommend using the baby car seat on the back seat of cars.
- There must be some covering above the child car seat.
- It could be very dangerous to modify the baby car seat without the certification from qualified authoritative institution, or add any extra components, or install the baby car seats without applying to the installation instruction of the manufactory.

3. Parts and interior equipment

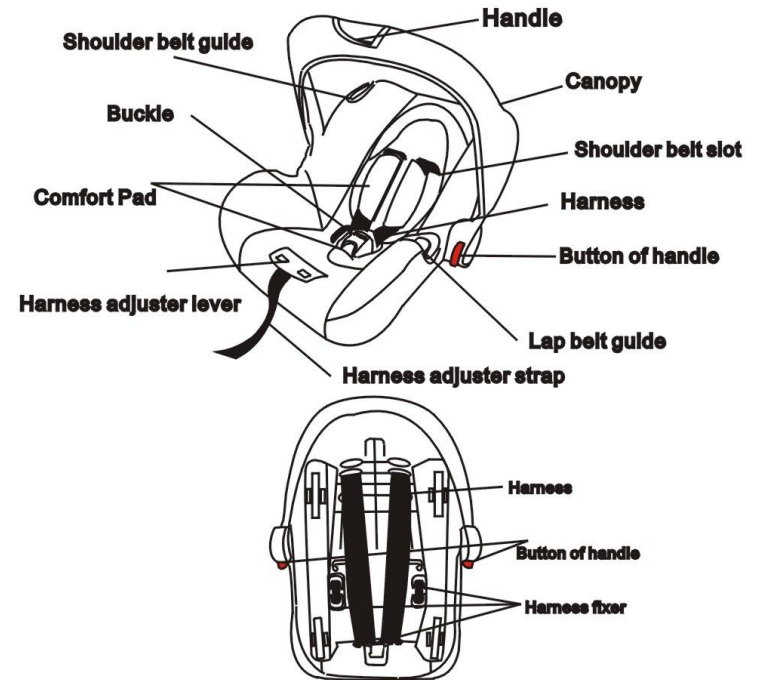

4. General Use


Rotations of the handle



The handle for the baby car seat can be rotated into 4 stable positions.

To adjust the handle, please press the red buttons on both sides of the handle at the same time. Now it can be rotated.

Rotate the handle of the baby car seat until it locks to a suitable position and please check if it is locked well.

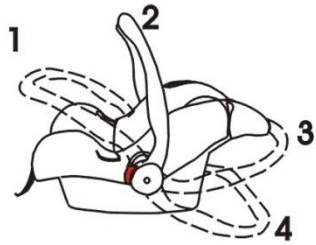

Position 1, installation in the vehicle seat. (Position when you're in driving). This position (only this position) is suitable for installing the baby car seat on the vehicle seat.

Position 2, straight the handle up and use it as a baby carrier.

Position 3, handle clicked back to initiate the rocking feature (use as a rocker).

Position 4, this one is for a more upright sitting position, easy for feeding.

Always ensure that the baby was secured in the seat firmly by the harness, and the handle is locked in position.

5. Securing the infant carrier

FIG1



Step 1 Rotate the handle to the upright position (Fig. 1).

Step 2 Put the seat in vehicle seat (Fig. 2), with the baby car seat against the backrest of the vehicle seat.

FIG2



Step 3 Slide vehicle lap belt through lap belt guides on both sides of the car seat. Insert the tongue plate into the seatbelt buckle with a clearly audible "click". Pull the shoulder belt and tighten the lap belt. Check to make sure the tongue plate is locked by pulling on the belt (Fig. 3).

Step 4 Place the diagonal belt in one of the diagonal belt guide in each side of baby car seat. Turn the handle of the car seat to the appropriate place in the car. (Hearing "Click"). Be sure the handle has been locked and it should be firmly against the backrest of vehicle seat.

Step 5 Tighten the vehicle 3-point seatbelt by pulling hard.



FIG3

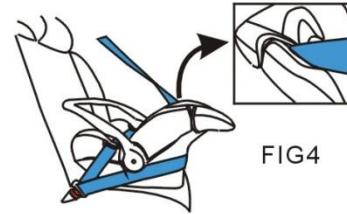
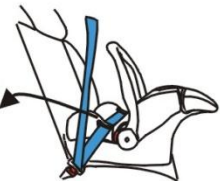


FIG4

You can release the child if you act the above steps in reversal steps.

Make sure all the belt's position are right and all belts are not twisted. Also check that the cover is not impeding the movement or fit of the belt webbing in any way.

6. Securing your baby

6.1 Setting the shoulder belt height

Check whether the shoulder belts are set at the right height for your child. The shoulder belts should be fed into the best slots that lie at shoulder height or just above.



If the height of shoulder belts of your child car seat is not fit for your child, adjust the height of the shoulder belts, please proceed as follows:

- Loosen the shoulder harness (see point 6.2).
- Pull out the buckle tongue at the backside of your child car seat, hold and pull out the chest pad until it comes out from the current slot, then thread it into the corresponding belts slot. Adjust another one when you finish.
- Ensure that both of the shoulder belts go through slots at the same height, and not twisted.

6.2 Loosen and tighten the shoulder straps

- The shoulder straps can be loosened by pressing the harness adjuster (under the seat cover) on the front of the seat.
- Press down the harness adjuster button with one hand, and hold and pull out the shoulder straps




outward with another hand, and you can success fully loosen the shoulder straps.

- Tighten the harness by pull the adjust strap in the front of car seat. Not too loss or too tight. Too loss will cause danger, too tight will make baby uncom fortable.



6.3 Securing the baby with the harness

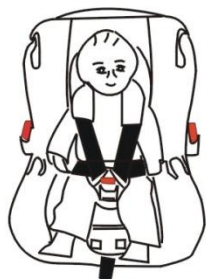

1. Firstly, adjust the shoulder straps height (see point 6.1).
2. Loosen the shoulder harness (see point 6.2), open the buckle by press the red button on the buckle, and then place them on both sides. Seat your child in the child car seat. Place both shoul der straps over your child' s shoulders.
3. Lock the buckle tightly. (see point 6.4)
4. Ensure that the straps are close to your child' s shoulders by pulling the straps tightly.

6.4 The use of security buckle

1. Put the two metal tongues of the buckle connectors together (Fig. 1).
2. Slot the two buckle tongues into the slot in the top of the buckle until they “click” into place (Fig. 2 and fig3).
3. Check if the harness is correctly locked by pulling the shoulder straps upwards
4. To release the harness, press the red button on the buckle downwards.

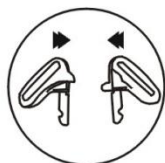


Fig1



Fig2



Fig3

7. Maintenance and Cleaning

7.1 Take off the fabric cover

- Step 1: First pull out the harness from the seat.
- Step 2: Unfasten the crews on the handle, take off the canopy.
- Step 3: Loosen the elastic, you can take off the fabric cover from upwards.

You can put on the canopy if you act the above steps in reversal ways.

7.2 Cleaning of the fabric cover

Use only neutral detergent and warm water to wash. Do not wash by machine. Spin-dry or tumble-dry are not recommended.



7.3 Maintenance and Cleaning

1. Please always check the function and spare parts of the baby car seat are in good condition to avoid accident.
2. Before using, please check the locking fastness of the buckle by pulling in effort the straps to see whether the buckle is loosened or not.
3. Do not use the car seat in cold, wet or hot circumstance for long time.

8. Procedure after an accident

The child car seat must be replaced when it has been subject to violent stresses in an accident.

For any other questions, please contact with dealer or manufacturer.