


0 to 48
Months

Carrying Capacity
Upto 18 kg

User's Manual

Babyhug Cruise Convertible Car Seat





Style Code - B6CS009

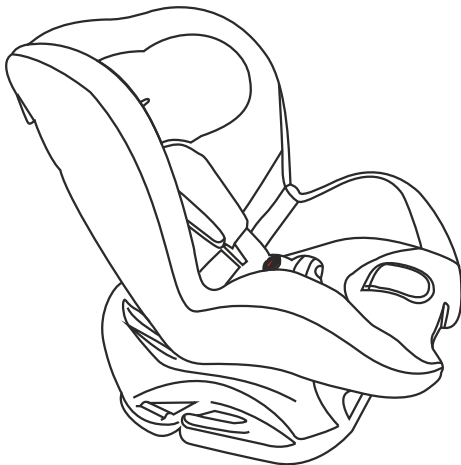

babyhug™

baby car seat

- 5 Point Safety Harness
- 3 Level Harness Height Adjustment
- 3 Reclining Positions
- Soft Padded Seat

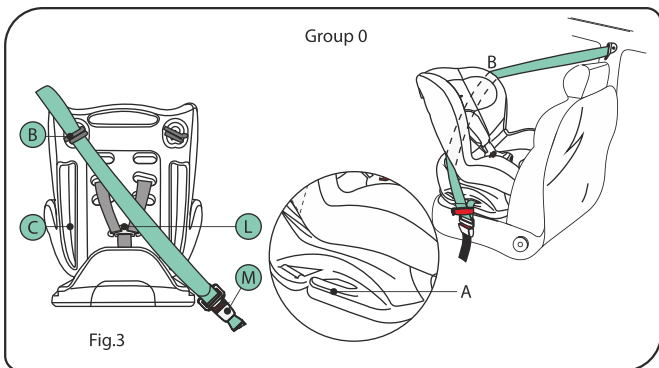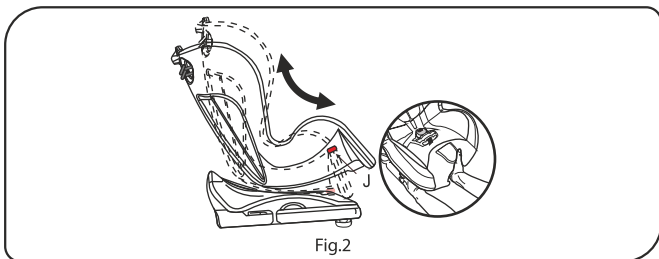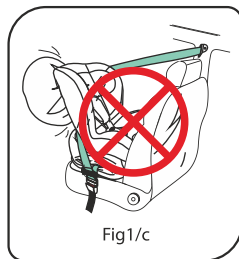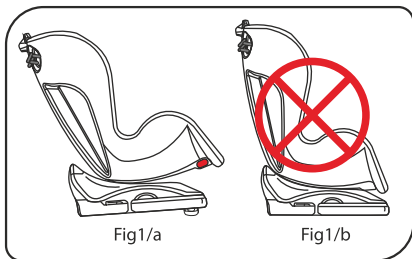

Group I

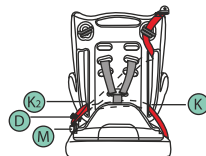
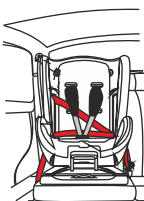


Fig.4

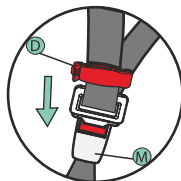


Fig.5

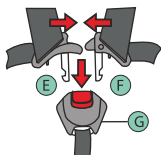


Fig.6/a

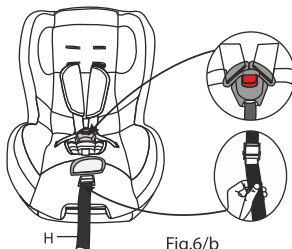


Fig.6/b



Fig.7/a


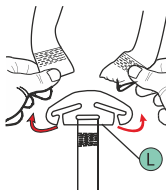


Fig.7/b

12-18kg
6-12kg
0-6kg

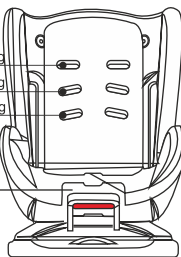

Instructions for safe use and installation of the child car seat Group 0, I
Child car seat suitable for children from birth to 9 kgs (Group 0) and from 9 to 18 kgs (Group I)

- This is a "Universal" child restraint. It is approved to Regulation No. 44, 04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
- A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" child restraint for this age group.
- This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.
- If in doubt, consult the retailer.
- The child car seat can only be fitted into cars equipped with 3 point seat belt system. The belt system must be approved to Reg. ECE 16 or equivalent.
- The safety seat can not be used without its original cover . The original cover is part of the homologation.

Instructions for use as a "Group 0" car safety seat
(from birth to 9 kgs appr.)

- Step 1. For Group 0, the safety seat must only be used in the most reclined Position . (see Fig. 1/a) . The safety seat must never be used in any other position (Fig. 1/b) . To adjust the reclining position of the safety seat, pull the red handle (J) forward until the most recline forward position .
- Step 2. The seat must always be rear facing (Fig. 3) . If your car has an airbag on the Passenger seat, the safety seat must only be used on the rear seats in the vehicle (Fig. 1/c) .
- Step 3. Secure the safety seat onto the car seat using the car seat belt (see Fig. 3) .
- Step 4. Pass the lap part of the seat belt under the base of the safety seat into the two points marked by a blue label (A) and fasten the clip to the corresponding buckle (M) .
- Step 5. Pass the upper diagonal part of the belt in the metallic guide (B) .
- Step 6. Take the red Lock-off clip (D) and attach it to the shoulder belt directly above the buckle (Fig. 4) .
- Step 7. Make sure that the belt is not twisted and strongly tightened before the Lock-off clip is attached.

Instructions for use as a "Group I" car safety seat (from 9 to 18 kgs)

- Step 1. Fasten the Child car seat in forward facing position on either the passenger or rear seat of your car using the 3 point belt system which is installed in the car.
- Step 2. Pass the 3 point belt system (lap and shoulder belt) through the red marked openings (Fig. 4) (K1 and K2) and through the upper metallic guide. Fasten the buckle (M) in the lock until a click is heard. (Fig. 5) .
- Step 3. At the same time the lap belt is pulled through the 2 plastic holes. (Fig. 4) .
- Step 4. Place and fasten the red Lock-off clip (D) on the shoulder belt directly above the buckle. (Fig. 5) .

IMPORTANT—DO NOT USE FORWARD FACING BEFORE THE CHILD'S WEIGHT EXCEEDS 9 kgs.

WARNING:

The forward facing position in group 1 can only be done if the child has reached a weight over 9 kgs. Your child seat can only be fitted into the front passenger seat of a car with a lap and diagonal seat belt the child seat and without an air bag. Do not use any load bearing contact points other than those described in the instructions and marked on the child restraint. The vehicle seat buckle is not positioned in or in front of the specified belt guide.

Securing your child into the safety seat

- Place the child into the safety seat and position the attached safety harness.
- Fasten the buckle (G) by joining the two parts of the belt (E and F) together, until a click is heard (Fig 6/a). To strongly tighten the safety harness, the child car seat is equipped with a central belt system (H) : it means that, if you pull on the belt of the front, the harness system is tightened. To loose the belt, just press the metallic button with on hand and with the other hand, simultaneously, pull on the harness system towards you. (Fig 6/b)
- Make sure that the harness system is not twisted or jammed somewhere.

Altering the position of the harness system depending on your child's weight

- **In the back of the safety seat, there are 3 pairs of holes, which can be used to adjust the shoulder straps to suit your child's weight** (Fig. 7/a). The lower holes are suitable for children up to a weight of 6 kgs. The middle holes are suitable for children between appr 6 to 12 kgs. The upper holes are suitable for children between appr 12 to 18 kgs .
- The pairs of holes should not be lower than the child's shoulders, when the child sits in the safety seat.

- To change the height position of the harness belt, you must separate it from the connection component (L) , which is placed behind the back part of the safety seat.
Pass the safety belt through the required holes and join it at the connection component (L).
- Make sure that the harness system is not twisted or jammed somewhere.

Important safety instructions!

- Each modification is submitted to the homologation of the responsible authorities.
- Alterations of the child car seat, must not be made as the safety and function of the seat can be diminished.
- The safety and use of the child car seat is only guaranteed, if it is fitted as per the mentioned instructions.
- Any changes can make the seat unsafe.
- Make sure that the child car seat is always fastened to the car seat with the belt, even if no child is transported.
- Do not leave any loose objects on the back seat of your car, as they will become dangerous to your child if you brake suddenly.
- Do not let the child car seat reach high temperatures through sun rays, these rays being also dangerous to your child.
- Never leave your child unattended in the safety seat.
- The child and the safety seat are correctly placed and that the safety belt is well and strongly fastened.
- Please keep these instructions. You can put these instructions in your vehicle handbook or insert these instructions into any gap between the cover and plastic seat.

Washing instructions

The covers are easily removable and can be cleaned by using neutral soap and cold water. Do not tumble dry, iron the covers. Do not use dry machine, just airing it.

The plastic parts can be cleaned by using a wet cloth, please do not use any solvent.



Imported & Marketed by

Brainbees Solutions Pvt. Ltd.

Corporate & Registered Office Address:

Rajashree Business Park, Plot No: 114,

Survey No. 338, Tadiwala Road,

Near Sohrab Hall, Pune 411 001

Customer Care No. :

02030556310

E-mail:

customercare@brainbees.com

Customer Care Address:

Same as Importer's address

Made in China