

Age Group

0+

User Manual

3-in-1 Bottle Warmer cum Sterilizer

Style Code: FNBA024



220-240V, 50Hz, 150W


babyhug[®]

bottle warmer cum sterilizer

- Multifunction Warmer cum Sterilizer
- Fits all Types of Bottles
- Auto Power Cut-off
- Easy to Use Control

Please read the instructions carefully before use and keep it safe for future reference.

PART

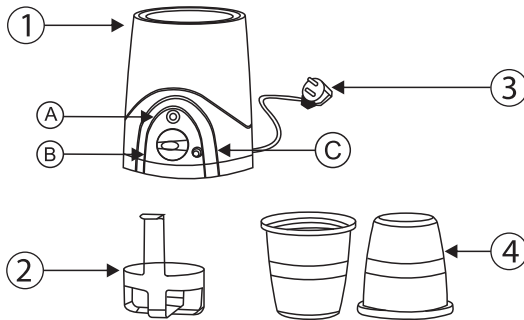

1. Warmer body
A : Indicator light
B : Switch
C : Reposition button
2. Bottle basket
3. Power Plug
4. Sterilizer cover

TECHNICAL PARAMETERS



Product Name	Bottle and Food Warmer
Voltage	AC 220 - 240v 50 - 60 Hz
Measurements	16.2 x 15.5 x 15 cm
Power Consumption	150 W
Weight	0.48kg

USER GUIDE:

3 Heating Modes - Keeps warm, heating and rapid heating to satisfy different needs.

The speed at which milk or food is heated depends on the quality and the initial temperature of the substance heated. (Ex: Out of refrigerator or room temperature). The temperature setting in Babyhug 3-in-1 bottle warmer cum sterilizer is designed to retain the nutrients in the milk / food heated and to best suit your little ones.

The following guidelines provides the approximate temperature that the water surrounding the container may reach


Control knob	Water temperature * In bottle warmer	USE
OFF		Switch off the warmer (and disconnect from power supply)
	40°C-50°C	Keeping milk or baby food warm
	70°C-75°C	Warming up baby food
100°C	85°C-100°C	Heating milk or baby food. Sterilizing milk bottle & other baby articles for feeding

NOTE

The LED indicator will light up while heating. It switches off automatically as soon as the water/food in the warmer has reached the selected temperature.

USAGE

Constant Temperature: Turn the switch to  It is about 40°C. This mode is to keep the milk warm in the bottle

Heating: Turn the switch to  it is about 70°C. This mode is for heating the baby feeding

Sterilizing: Regulate the switch to 100°C. This mode will sterilise milk bottle and accessories

WARMING MILK OR FOOD

- Place the warmer flat on a table
- Pour about 220ml Clean water into the warmer
- Place the plastic/glass container or milk bottle in the warming basket and immerse the basket in the water
- Connect the plug and turn the switch to the desired temperature
- Shake or stir the bottle or food and check the temperature before you feed the baby
- Do not keep the milk bottle for a long time in order to avoid food deterioration
- Always check the food temperature by testing on the back of your hand before feeding

STERILIZING METHOD:

- Place the warmer flat on a table
- Add 30 ml of clean water in the base by measuring water with the measurement cup
- Place the bottle upside down and accessories in the warming basket and immerse the basket in the water. Close the lid
- Connect the plug and turn the switch to the maximum temperature. The indicator light will turn on, indicating the start of sterilization process
- After the complete sterilization process, the sterilizer will auto cut & the indicator light will turn off
- Switch it off & let it cool down
- After the sterilizer cool down use a clean tong or any other clean & safe method to take out the accessories & bottle
- Now your bottles are sterilized and ready to use for your baby

MAINTENANCE

1. After using, please unplug the power cord, and let the warmer cool down naturally.
2. Pour away the remaining water in the warmer, wipe it clean and leave it out to dry.
3. Wash and dry the laddle and cover after using.
4. Use clean water to reduce the amount of scale deposits.

Deposits removal: Add 50ml of white vinegar and 100ml of water into the warmer. After all deposits are dissolved, pour away the water from the warmer and wash thoroughly.

CAUTION

- Read all instructions before use.
- Check the temperature of the feed before feeding the baby.
- Do not touch hot surfaces with bare hands, use handles.
- Heat food separate from water, pour out the water after use.
- Keep the product away from children.
- Pull off the plug after use.
- Don't immerse in water or pour water on the product to wash. Clean it with soft wet cloth or sponge.
- Beware of the deterioration time of the milk or food.
- Shake the bottle and check the milk bottle or glass and food contents before you feed your baby.
- To protect against electrical shock, do not immerse cord, plug or body in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Do not use abrasive powder or metal brush.
- Do not let supply cord hang over edge of tables or counters, or touch hot surfaces.
- Do not place the appliance on or near heat sources such as a gas or electric burner, or near heated oven.
- This appliance is not intended for use by children
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Imported & Marketed by:

Brainbees Solutions Pvt. Ltd.

Corporate & Registered Office Address:

Rajashree Business Park, Plot No.: 114,
Survey No. 338, Tadiwala Road,
Near Sohrab Hall, Pune - 411001

For Any Feedback, Contact:

Customer Care Executive No.: 020-46608179

E-mail: customercare@brainbees.com

Customer Care Address :

Same as Marketer's address